



CRANKSHAFT POSITION SENSOR REPLACEMENT

IG0FE-02

1. REMOVE ENGINE UNDER COVER
2. REMOVE CRANKSHAFT POSITION SENSOR
 - (a) Disconnect the sensor connector.
 - (b) Remove the bolt and sensor.
Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)
3. REINSTALL NEW CRANKSHAFT POSITION SENSOR
 - (a) Install the sensor with the bolt.
 - (b) Connect the sensor connector.
4. REINSTALL ENGINE UNDER COVER