


## REPLACEMENT

1. REMOVE AIR CLEANER HOSE
2. DISCONNECT HIGH-TENSION CORDS FROM IGNITION COILS

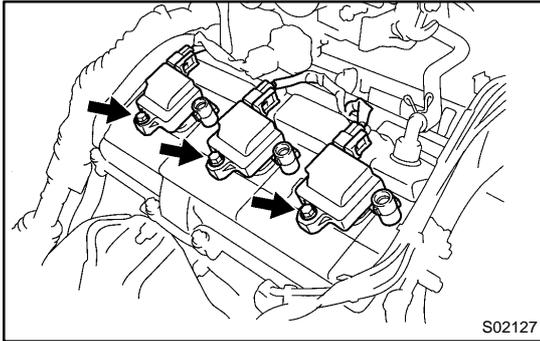

3. REMOVE IGNITION COILS
  - (a) Disconnect the connector from the ignition coil.
  - (b) Remove the bolt and ignition coil from the LH cylinder head.
4. REINSTALL NEW IGNITION COILS
  - (a) Connect a new ignition coil to the spark plug, and attach the ignition coil to the cylinder head cover.
  - (b) Install the ignition coil with the bolt.  
**Torque: 7.8 N·m (80 kgf·cm, 69 in.-lbf)**
5. RECONNECT HIGH-TENSION CORDS TO IGNITION COILS
6. REINSTALL AIR CLEANER HOSE