


REPLACEMENT

REPLACE CRANKSHAFT FRONT OIL SEAL

HINT:

There are 2 methods ((a) and (b)) to replace the oil seal.


- (a) If oil pump is removed from cylinder block:
- (1) Using a screwdriver, pry out the oil seal.

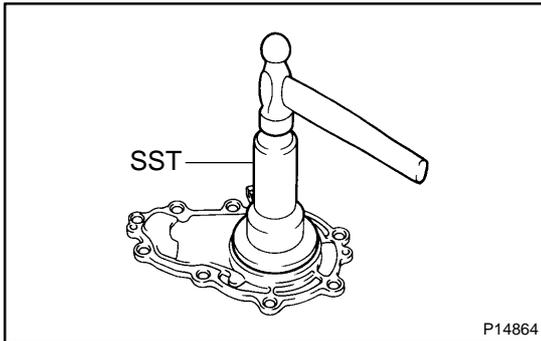

- (2) Using SST and a hammer, tap in a new oil seal until its surface is flush with the oil pump case edge.

SST 09223-50010

- (3) Apply MP grease to the oil seal lip.

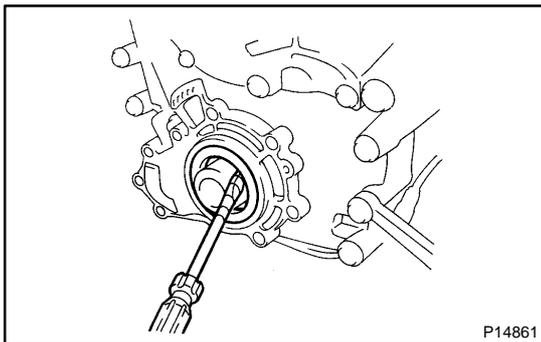


- (b) If oil pump is installed cylinder block

- (1) Using a screwdriver, pry out the oil seal.

NOTICE:

Be careful not to damage the crankshaft. Tape the screwdriver tip.

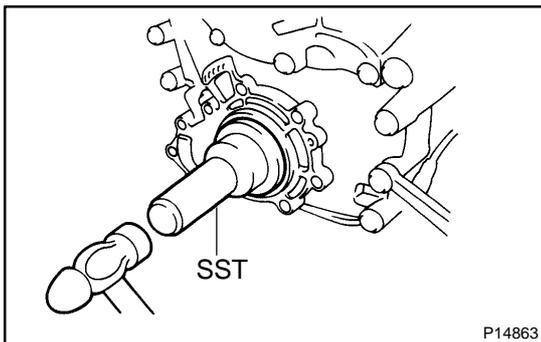

- (2) Apply MP grease to a new oil seal lip.

- (3) Using SST and a hammer, tap in the oil seal until its surface is flush with the oil pump case edge.

SST 09223-50010