


REPLACEMENT

1. **IF NECESSARY, REPLACE REVERSE RESTRICT PIN**
 - (a) Remove the reverse restrict pin.
 - (1) Using a torx socket wrench (T40), remove the screw plug.
 - (2) Using a pin punch and hammer, drive out the slotted spring pin.
 - (3) Remove the reverse restrict pin.
 - (b) Inspect the reverse restrict pin.
Turn and push the reverse restrict pin by hand. Check for smooth operation.

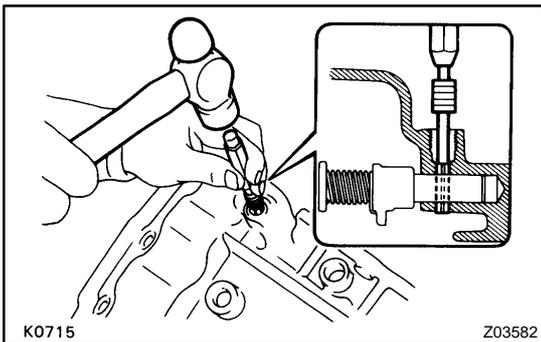


- (c) Install the reverse restrict pin.
 - (1) Install the reverse restrict pin to the extension housing or transfer adaptor.
 - (2) Using a pin punch and hammer, drive in the slotted spring pin, as shown.
 - (3) Apply sealant to the plug threads.

Sealant:

Part No.08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent

- (4) Using a torx socket wrench (T40), install and torque the screw plug.

Torque: 19 N·m (190 kgf·cm, 14 ft·lbf)

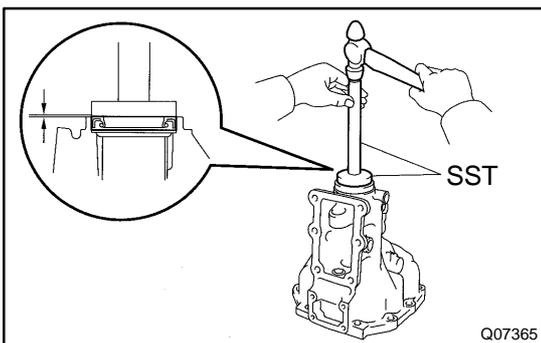


2. **2WD:**
IF NECESSARY, REPLACE EXTENSION HOUSING OIL SEAL

- (a) Remove the dust deflector.
- (b) Using a screwdriver, pry out the oil seal.
- (c) Using SST and a hammer, drive in a new oil seal.
SST 09950-60010 (09951-00570), 09950-70010 (09951-07150)

Drive in depth: 0 ± 0.5 mm (0 ± 0.020 in.)

- (d) Install the deflector.

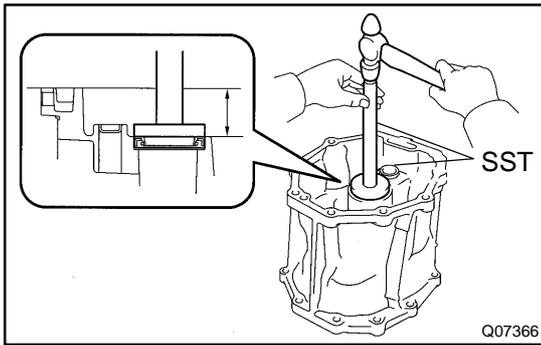**3. 4WD:****IF NECESSARY, REPLACE TRANSFER ADAPTOR OIL SEAL**

(a) Using a screwdriver, pry out the oil seal.

(b) Using SST and a hammer, drive in a new oil seal.

SST 09950-60010 (09951-00570), 09950-70010
(09951-07150)

Drive in depth: 45.6 ± 0.5 mm (1.795 ± 0.020 in.)