


## REPLACEMENT

### IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

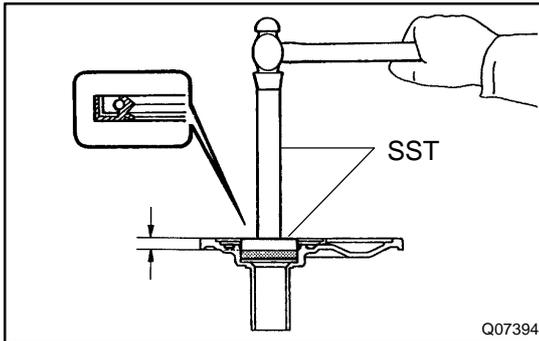

(b) Using SST and a hammer, drive in a new oil seal.  
SST 09950-60010 (09951-00510), 09950-70010  
(09951-07150)

**Drive in depth:  $11.7 \pm 0.5$  mm ( $0.461 \pm 0.020$  in.)  
from retainer end**