

INSTALLATION

Installation is in the reverse order of removal. (See page [MT-4](#))

HINT:

After installation, do the road test.