



REPLACEMENT

1. IF NECESSARY, REPLACE REVERSE RESTRICT PIN

- (a) Remove the reverse restrict pin.
 - (1) Using a hexagon wrench, remove the screw plug.
 - (2) Using a pin punch and hammer, drive out the slotted spring pin.
 - (3) Pull off the lever housing and slide out the shaft.

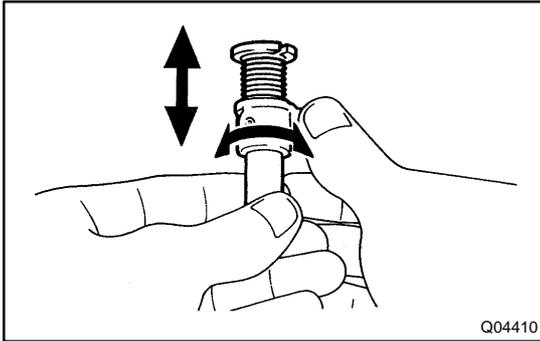

- (b) Inspect the reverse restrict pin.
Turn and push the reverse restrict pin by hand. Check it for smooth operation.

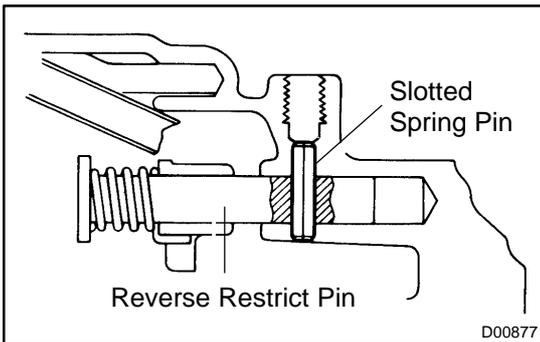

- (c) Install the reverse restrict pin.
 - (1) Install the lever housing.
 - (2) Using a pin punch and hammer, drive in the slotted spring pin, as shown.
 - (3) Apply sealant to the plug threads.

Sealant:


Part No.08833-00080, THREE BOND 1344, LOCTITE 242 or equivalent

- (4) Install and torque the screw plug.


Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)


2. IF NECESSARY, REPLACE REAR BEARING OUTER RACE

- (a) Using 2 screwdrivers, remove the snap ring.

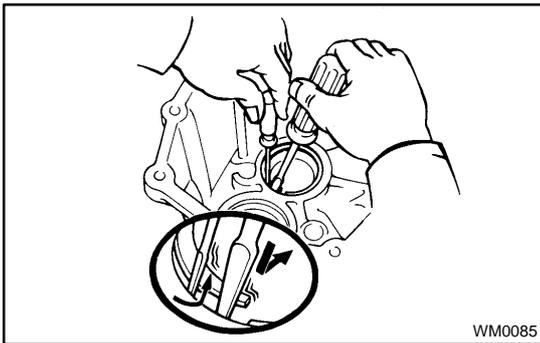


- (b) Using SST, remove the outer race.
SST 09308-00010

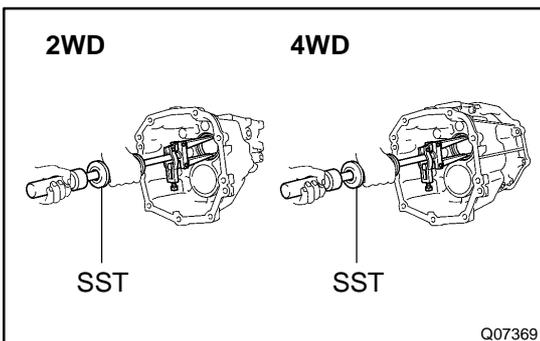

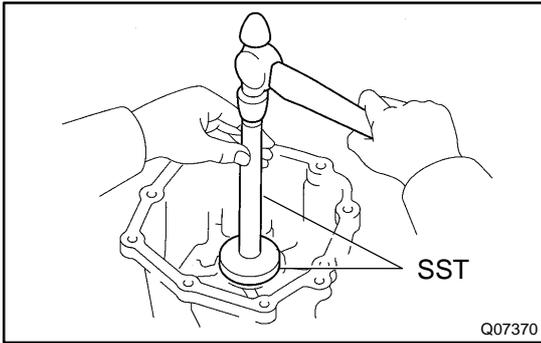


- (c) Using SST, install a new outer race.
SST 09950-60010 (09951-00560), 09950-70010 (09951-07150)
- (d) Using a screwdriver, install the snap ring.

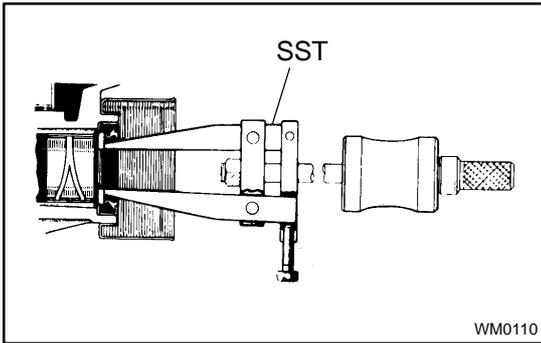


**3. 2WD:
IF NECESSARY, REPLACE EXTENSION HOUSING OIL SEAL**

- (a) Using SST, remove the oil seal.
SST 09308-00010 or 09308-10010 w/ output shaft installed

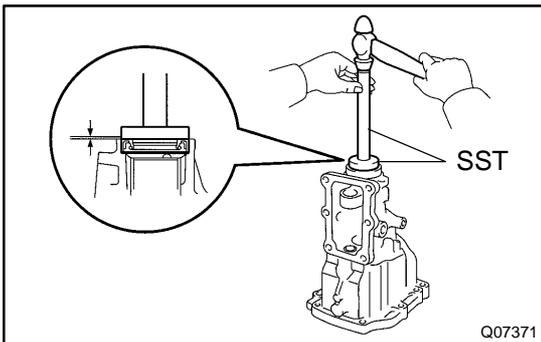

- (b) Using SST and a hammer, drive in a new oil seal.
SST 09950-60010 (09951-00560), 09950-70010 (09951-07150)
Drive in depth: 0 ± 0.5 mm (0 ± 0.020 in.)

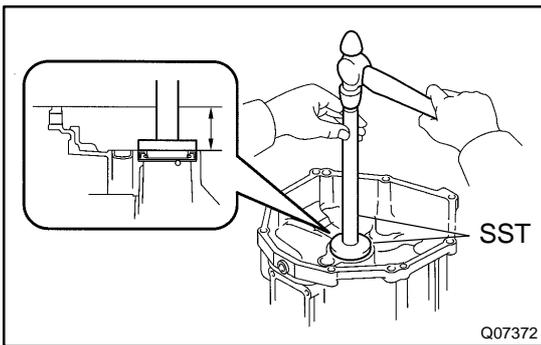

**4. 4WD:
IF NECESSARY, REPLACE TRANSFER ADAPTOR OIL SEAL**

- (a) Using a screwdriver, pry out the oil seal.
- (b) Using SST and a hammer, drive in a new oil seal.
SST 09950-60010 (09951-00560), 09950-70010 (09951-07150)
Drive in depth: 45.5 ± 0.5 mm (1.969 ± 0.020 in.)