


 
 
 

 

 


PROPELLER SHAFT

SST (Special Service Tools)

PP0AH-04

| | | |
|---|---|--|
|  | <p>09325-20010 Transmission Oil Plug</p> | <p>2-joint type: Transmission oil leakage prevention</p> |
|  | <p>09325-40010 Transmission Oil Plug</p> | <p>3-joint type: Transmission oil leakage prevention</p> |
|  | <p>09330-00021 Companion Flange Holding Tool</p> | <p>Flange</p> |
|  | <p>09332-25010 Universal Joint Bearing Remover & Replacer</p> | <p>Spider bearing</p> |
|  | <p>09950-30012 Puller A Set</p> | |
|  | <p>(09951-03010) Upper Plate</p> | |
|  | <p>(09953-03010) Center Bolt</p> | |
|  | <p>(09954-03010) Arm</p> | |
|  | <p>(09955-03030) Lower Plate 130</p> | |
|  | <p>(09956-03020) Adapter 18</p> | |