
 
 
 

 
 
 
 
 
 
 
 
 
 

 
 
 

 
 
 
 
 


 
 

 
 








STEERING**SST (Special Service Tools)**

PP3HD-02





 
 



 

 
 
	09023-12700	Union Nut Wrench 17mm	PS gear (2WD, 4WD and Pre runner)
	09023-38200	Union Nut Wrench 12mm	PS gear (2WD, 4WD and Pre runner)
	09521-24010	Drive Shaft Boot Clamping Tool	PS gear (2WD)
	09527-20011	Rear Axle Shaft Bearing Remover	PS gear (2WD)
	09608-04031	Front Hub Inner Bearing Cone Replacer	PS vane pump (2RZ-FE, 3RZ-FE)
	09612-00012	Rack & Pinion Steering Rack Housing Stand	PS gear (2WD, 4WD and Pre runner)
	09612-22011	Tilt Handle Bearing Replacer	PS gear (2WD)
	09612-24014	Steering Gear Housing Overhaul Tool Set	
	(09613-22011)	Steering Rack Shaft Bushing Puller	PS gear (2WD)
	09616-00011	Steering Worm Bearing Adjusting Socket	PS gear (2WD, 4WD and Pre runner)
	09631-00350	Steering Rack Cover 35	PS gear (4WD and Pre runner)
	09631-10021	Rack Stopper Wrench	PS gear (2WD)

PREPARATION - STEERING

	<p>09631-10030 Oil Seal Remover</p>	<p>PS vane pump (2RZ-FE, 3RZ-FE)</p>
	<p>09631-12071 Steering Rack Oil Seal Test Tool</p>	<p>PS gear (2WD, 4WD and Pre runner)</p>
	<p>09631-20060 Bearing Guide Nut Wrench</p>	<p>PS gear (4WD and Pre runner)</p>
	<p>09631-20081 Seal Ring Tool</p>	<p>PS gear (2WD, 4WD and Pre runner)</p>
	<p>09631-20102 Steering Rack Cover "H"</p>	<p>PS gear (2WD)</p>
	<p>09640-10010 Power Steering Pressure Gauge Set</p>	
	<p>(09641-01010) Gauge Assy</p>	<p>Power steering fluid</p>
	<p>(09641-01030) Attachment B</p>	<p>Power steering fluid</p>
	<p>(09641-01060) Attachment E</p>	<p>Power steering fluid</p>
	<p>09922-10010 Variable Open Wrench</p>	<p>PS gear (2WD, 4WD and Pre runner)</p>
	<p>09950-40011 Puller B Set</p>	
	<p>(09958-04011) Holder</p>	<p>Tilt steering column</p>
	<p>09950-50013 Puller C Set</p>	

	(09951-05010) Hanger 150	Non-tilt steering column Tilt steering column
	(09952-05010) Slide Arm	Non-tilt steering column Tilt steering column
	(09953-05010) Center Bolt 100	Non-tilt steering column Tilt steering column
	(09954-05021) Claw No.2	Non-tilt steering column Tilt steering column
	09950-60010 Replacer Set	
	(09951-00180) Replacer 18	PS gear (2WD, 4WD and Pre runner)
	(09951-00240) Replacer 24	PS gear (2WD)
	(09951-00250) Replacer 25	PS gear (2WD)
	(09951-00260) Replacer 26	PS gear (2WD, 4WD and Pre runner)
	(09951-00280) Replacer 28	PS gear (2WD, 4WD and Pre runner)
	(09951-00310) Replacer 31	PS gear (2WD)
	(09951-00320) Replacer 32	PS gear (2WD, 4WD and Pre runner)
	(09951-00330) Replacer 33	PS vane pump (5VZ-FE) PS gear (2WD, 4WD and Pre runner)

PREPARATION - STEERING

	(09951-00360) Replacer 36	PS gear (4WD and Pre runner)
	(09951-00400) Replacer 40	PS gear (2WD)
	(09951-00420) Replacer 42	PS gear (2WD)
	(09951-00490) Replacer 49	PS gear (4WD and Pre runner)
	(09952-06010) Adapter	PS gear (2WD, 4WD and Pre runner)
	09950-70010 Handle Set	
	(09951-07100) Handle 100	PS vane pump (5VZ-FE) PS gear (4WD and Pre runner)
	(09951-07150) Handle 150	PS gear (2WD, 4WD and Pre runner)
	(09951-07200) Handle 200	PS gear (2WD)
	(09951-07360) Handle 360	PS gear (2WD, 4WD and Pre runner)
	09960-10010 Variable Pin Wrench Set	
	(09962-01000) Variable Pin Wrench Arm Assy	PS vane pump (2RZ-FE, 3RZ-FE, 5VZ-FE)
	(09963-01000) Pin 10	PS vane pump (2RZ-FE, 3RZ-FE, 5VZ-FE)