



INSTALLATION

Installation is in the reverse order of removal (See page [PR-3](#)).

HINT:

3-joint type:

- Center bearing center line and the center bearing housing center line must be adjusted within $0 \pm 1 \text{ mm}$ ($0 \pm 0.039 \text{ in.}$) of each other in the vehicles front and rear direction when the vehicle is unloaded.
- When adjusting the center bearing housing center line, it should be perpendicular to the axis of front propeller shaft.