


REMOVAL

REMOVE PROPELLER SHAFT

- (a) Place matchmarks on the propeller shaft and differential flanges.
- (b) Remove the 4 nuts, bolts and washers.
Torque: 74 N·m (750 kgf-cm, 54 ft-lbf)
- (c) 3-joint type:
Remove the center support bearing 2 set bolts from the frame crossmember.
Torque: 36 N·m (370 kgf-cm, 27 ft-lbf)
- (d) Pull the sleeve yoke from the transmission and remove the propeller shaft.

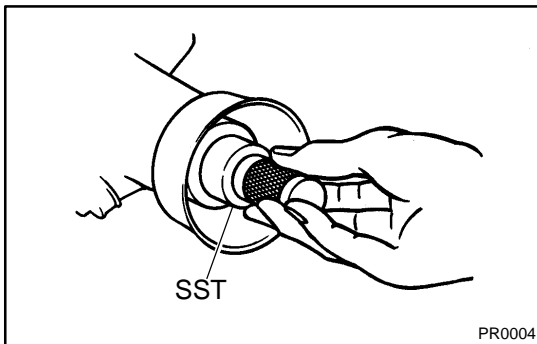

- (e) Insert SST in the transmission to prevent oil leakage.
SST 09325-20010 (2-joint type),
09325-40010 (3-joint type)