

REMOVAL

NOTICE:

Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

If the IC terminals are touched, the IC may be destroyed by static electricity.

1. REMOVE FRONT CONSOLE BOX
2. REMOVE LOWER CENTER COVER
3. Double cab:
DISCONNECT REAR HEATER DUCTS


Remove the 2 bolts and disconnect the LH and RH rear heater ducts.

4. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the 3 connectors.

NOTICE:

Remove the connector with the sensor assembly installed.

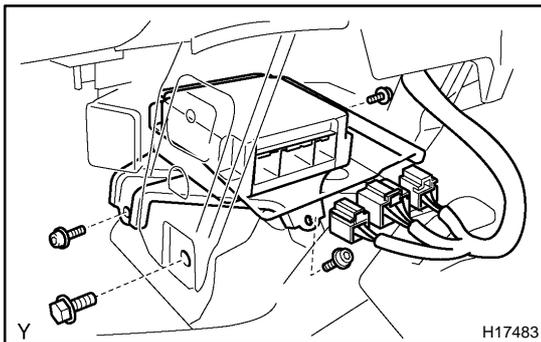

- (b) Remove the bolt holding the No. 1 brace to the floor.
- (c) Using a torx wrench, remove the 3 screws and airbag sensor assembly.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)