



INSTALLATION

1. INSTALL FRONT AIRBAG SENSOR LH AND RH

- (a) Install the front airbag sensor with the 2 bolts and 2 nuts with the arrows on the sensors facing toward the front of the vehicle.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

NOTICE:

- **Connection of the connector is done after the sensor has been installed.**
- **Make sure the sensor is installed with the specified torque.**
- **If the sensor has been dropped, or there are cracks, dents or other defects in the case, brackets or connector, replace the removed sensor with new one.**
- **The front sensor is equipped with an electrical connection check mechanism. Be sure to lock this mechanism securely when connecting the connector. If the connector is not securely locked, a malfunction code will be detected by the diagnostic system.**

- (b) Connect the front airbag sensor connectors.

2. INSTALL BATTERY

- (a) Install the battery carrier and battery.
 (b) Install the battery clamp with the bolt.