


## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON or ACC position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

### 1. REMOVE BATTERY

- Remove the bolt and battery clamp.
- Remove the battery and battery carrier.

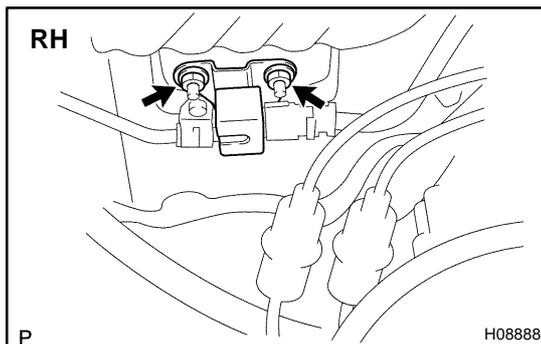


### 2. REMOVE FRONT AIRBAG SENSOR RH

- Disconnect the front airbag sensor connector.

### NOTICE:

**Disconnect the connector with the front airbag sensor installed.**

- Remove the 2 nuts and front airbag sensor RH.

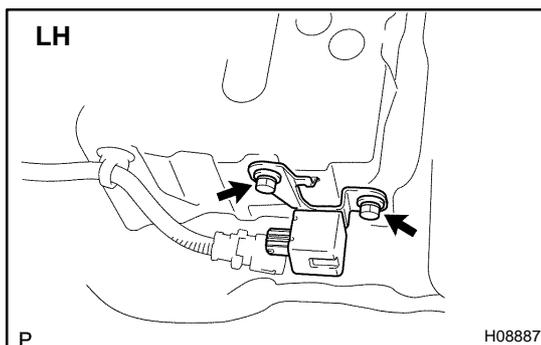

### 3. REMOVE FRONT AIRBAG SENSOR LH

- Disconnect the front airbag sensor connector.

### NOTICE:

**Disconnect the connector with the front airbag sensor installed.**

- Remove the 2 bolts and front airbag sensor LH.