


INSTALLATION


NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace with new parts.

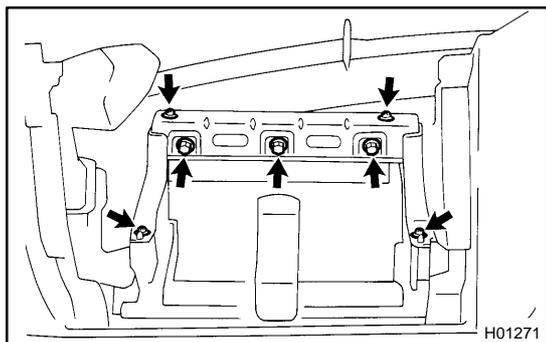

1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Install the airbag door and instrument panel stay to the instrument panel.

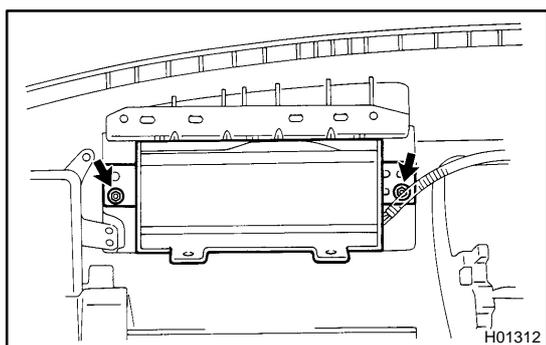

- (b) Install the front passenger airbag assembly to the instrument panel.

CAUTION:

Make sure that no foreign objects are trapped between the airbag door and bag, and within the module.

NOTICE:

If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.


2. INSTALL INSTRUMENT PANEL (See page [BO-55](#))

Install the 2 bolts to instrument panel reinforcement.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

NOTICE:

- Make sure the front passenger airbag assembly is installed to the specified torque.
- When installing the instrument panel, take care that the airbag wire harness does not interfere with other parts and is not pinched between other parts.

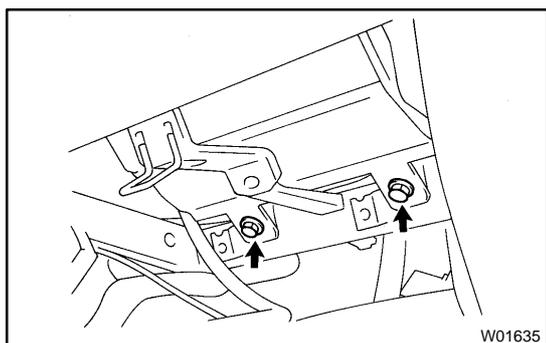

3. CONNECT AIRBAG CONNECTOR

- (a) Connect the airbag connector.
 (b) Install the instrument finish lower panel.
 (c) Install the glove compartment door.

