


REMOVAL

NOTICE:

If the wiring connector of the SRS is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.

1. **DISCONNECT AIRBAG CONNECTOR**
 - (a) Remove the glove compartment door.
 - (b) Remove the instrument finish lower panel.

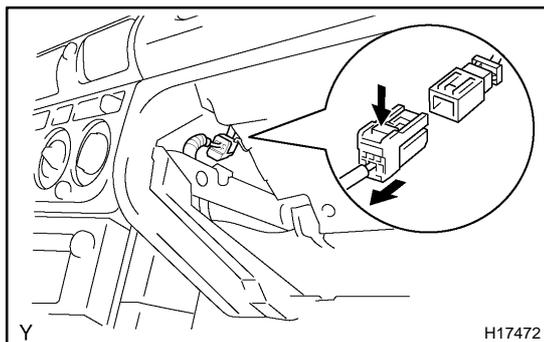


- (c) Disconnect the airbag connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

2. **REMOVE INSTRUMENT PANEL** (See page [BO-52](#))

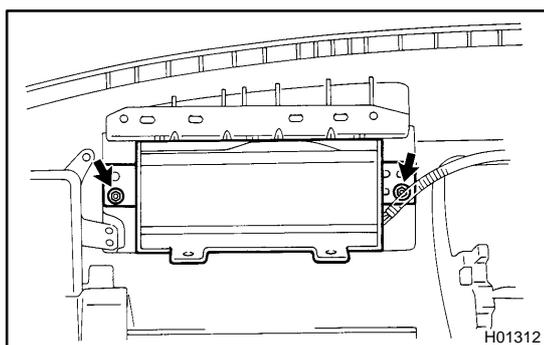

3. **REMOVE FRONT PASSENGER AIRBAG ASSEMBLY**
 - (a) Remove the 2 bolts and front passenger airbag assembly.

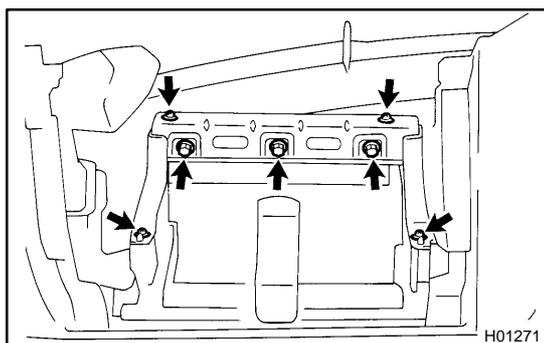

- (b) Remove the 3 bolts, 2 screws and the instrument panel stay.
- (c) Remove the airbag door.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment direction facing downward.
- Never disassemble the front passenger airbag assembly.