



PASSENGER AIRBAG MANUAL ON-OFF SWITCH INSPECTION

RS02J-04

1. INSPECT PASSENGER AIRBAG MANUAL ON-OFF SWITCH CONTINUITY

HINT:

Release the airbag activation prevention mechanism of the passenger airbag manual on-off switch connector on the airbag sensor assembly side. (See page [DI-588](#))

Switch position	Tester connection	Specified condition
ON	1 – 3 2 – 4	Continuity
	3 – 4 5 – 6	No continuity
	5 – 6	Continuity
OFF	2 – 4	No continuity
	3 – 4	Resistance 2.1 – 2.7 Ω

If continuity is not as specified, replace the switch.

2. INSPECT PASSENGER AIRBAG MANUAL ON-OFF INDICATOR OPERATION

- Check that continuity exists between terminals 5 and 6.
- Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2.
- Check that the indicator light lights up.

If the operation is not as specified, replace the indicator.

