


## DISASSEMBLY

### 1. CHECK HUB BEARINGS

Clean the bearings and outer races and inspect them for wear or damage.

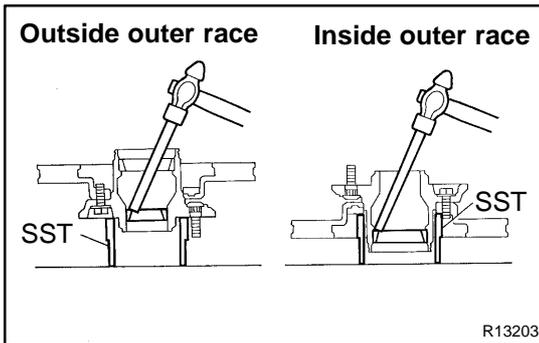

### 2. REMOVE BEARING OUTER RACES

Using SST, a brass bar and hammer, remove the inside and outside of the bearing outer races.

SST 09527-17011

#### NOTICE:

**Be careful not to damage the ABS speed sensor rotor.**