



REASSEMBLY

INSTALL NEW BEARING OUTER RACES

- (a) Using SST and a press, install a new inside of the bearing outer race.
SST 09527-17011, 09950-60010 (09951-00640),
09950-70010 (09951-07150)
- (b) Using SST and a press, install a new outside of the bearing race.
SST 09527-17011, 09950-60010 (09951-00490),
09950-70010 (09951-07150)

NOTICE:

Be careful not to damage the ABS speed sensor rotor.