


REPLACEMENT

1. REMOVE BUSHING

- (a) Cut off the shaded portion shown in the illustration to expose the edge of the tube.


NOTICE:

Be careful not to damage the edge of the arm tube.

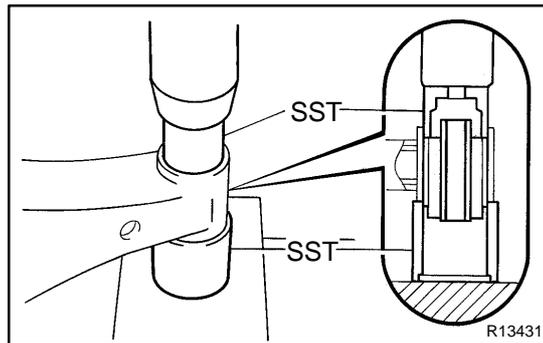

- (b) Face the cut side downward and using SST and a press, remove the bushing.

SST 09710-30021 (09710-03071, 09710-03141)

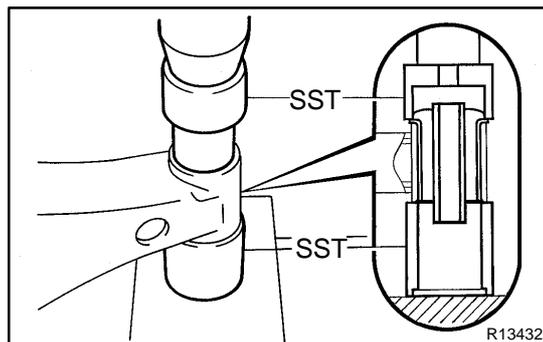

2. INSTALL NEW BUSHING

Using SST and a press, install a new bushing.

SST 09710-30021 (09710-03101, 09710-03141)

NOTICE:

Press in the bushing from the rear side.