


## REMOVAL

### 1. REMOVE FRONT WHEEL


**Torque: 110 N·m (1,150 kgf·cm, 83 ft·lbf)**

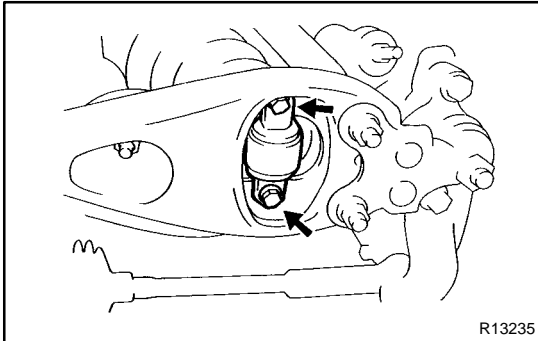

### 2. REMOVE SHOCK ABSORBER

- (a) Remove the 2 bolts and disconnect the shock absorber from the lower suspension arm.

**Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)**

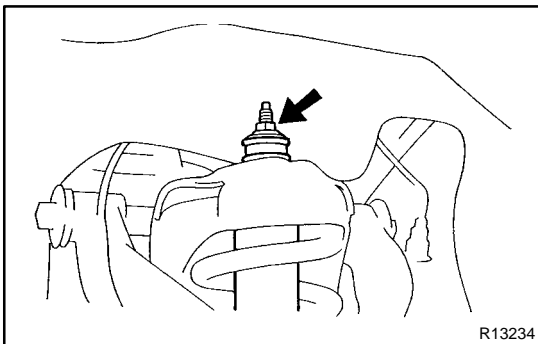

- (b) Hold the shock absorber rod, then remove the nut, retainer, cushion and shock absorber.

**Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)**

- (c) Remove the cushion and retainer from the shock absorber.