



DISASSEMBLY

REMOVE SUSPENSION SUPPORT AND COIL SPRING

- (a) Using SST, compress the coil spring until there is a clearance on both ends.

SST 09727-30021

NOTICE:

- To avoid damage to SST, set SST arms to allow clearance to hold a 8-roll coil between them.
 - Do not compress the coil spring more than necessary.
 - Do not use an impact wrench. It will damage the SST.
- (b) Remove suspension support center nut.
- (c) Remove the 3 retainers, 2 cushions, suspension support and coil spring.