


## REPLACEMENT

### 1. REMOVE BUSHING

Using SST and a press, remove the bushing.

SST 09506-35010, 09632-36010

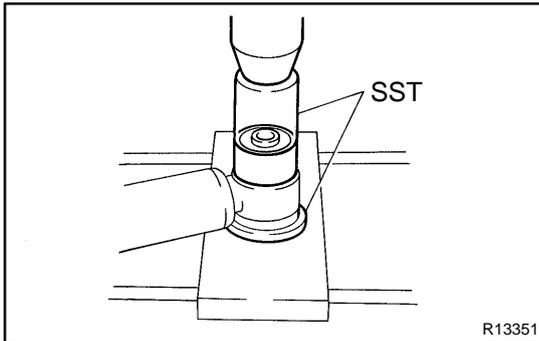

### 2. INSTALL NEW BUSHING

Using SST and a press, install a new bushing.

SST 09506-35010, 09632-36010

HINT:

Do not apply grease or oil to the bushing.