


## REPLACEMENT


### 1. REMOVE UPPER BALL JOINT

- (a) Remove the wire and boot.
- (b) Using a snap ring expander, remove the snap ring.

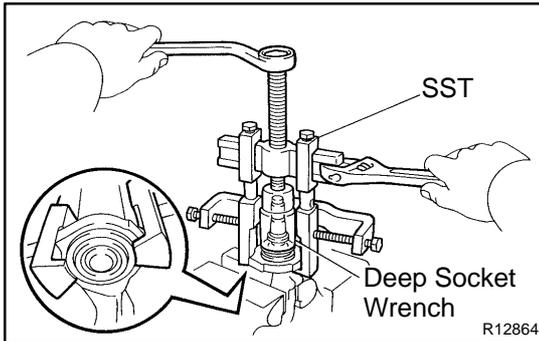

- (c) Using SST and a deep socket wrench, remove the upper ball joint.

SST 09950-40011 (09951-04010, 09952-04010, 09953-04020, 09954-04010, 09955-04031, 09957-04010, 09958-04011)

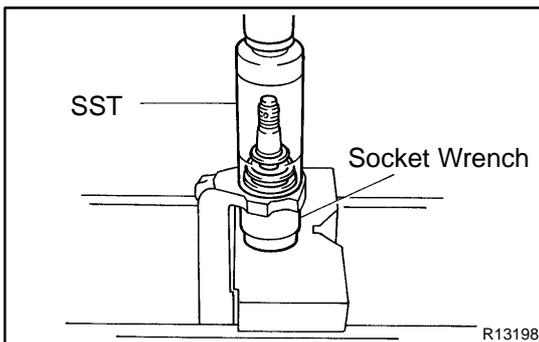

### 2. INSTALL UPPER BALL JOINT

- (a) Using SST and a socket wrench, install a new ball joint.
- (b) Using a snap ring expander, install a new snap ring.
- (c) Install a new boot and fix it with a new wire.

#### HINT:

Use the grease supplied in the kit.