

INSTALLATION

Installation is in the reverse order of removal (See page [SA-84](#)).

HINT:

After installation, check the front wheel alignment (See page [SA-6](#)) and ABS speed sensor signal (See page [DI-534](#)).