

FUEL CUT RPM INSPECTION

SF047-02


1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

2. CONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL (See page EM-10)

3. INSPECT FUEL CUT OFF RPM

(a) Increase the engine speed to at least 3,500 rpm.

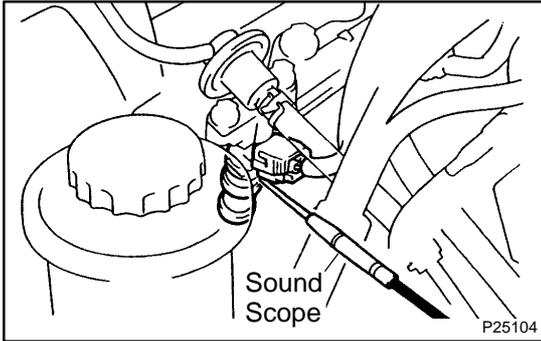

(b) Using a sound scope, check for injector operating noise.

(c) Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

Measure with the A/C OFF.

Fuel return rpm:

M/T	1,400 rpm
A/T	1,500 rpm

4. DISCONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL