


## REMOVAL

1. DISCONNECT VACUUM SENSING HOSE FROM FUEL PRESSURE REGULATOR
2. DISCONNECT FUEL RETURN HOSE FROM FUEL PRESSURE REGULATOR

### CAUTION:

Put a suitable container or shop towel under the pressure regulator.

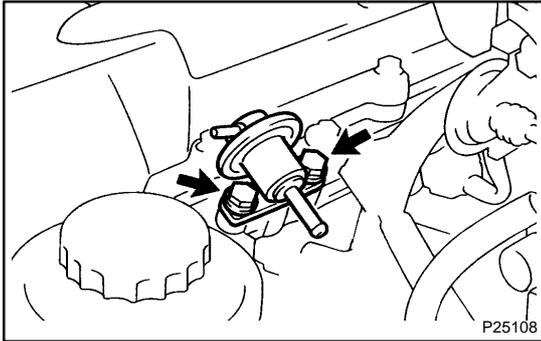

3. REMOVE FUEL PRESSURE REGULATOR
  - (a) Remove the 2 bolts and fuel pressure regulator.  
**Torque: 8.8 N·m (90 kgf·cm, 78 in.-lbf)**
  - (b) Remove the O-ring.

### HINT:

At the time of installation, please refer to the following items.  
Use a new O-ring.