


# FUEL TANK AND LINE COMPONENTS

SF03B-04

**CAUTION:**

- Always use new gaskets when replacing the fuel tank or component parts.
- Apply the proper torque to all parts tightened.

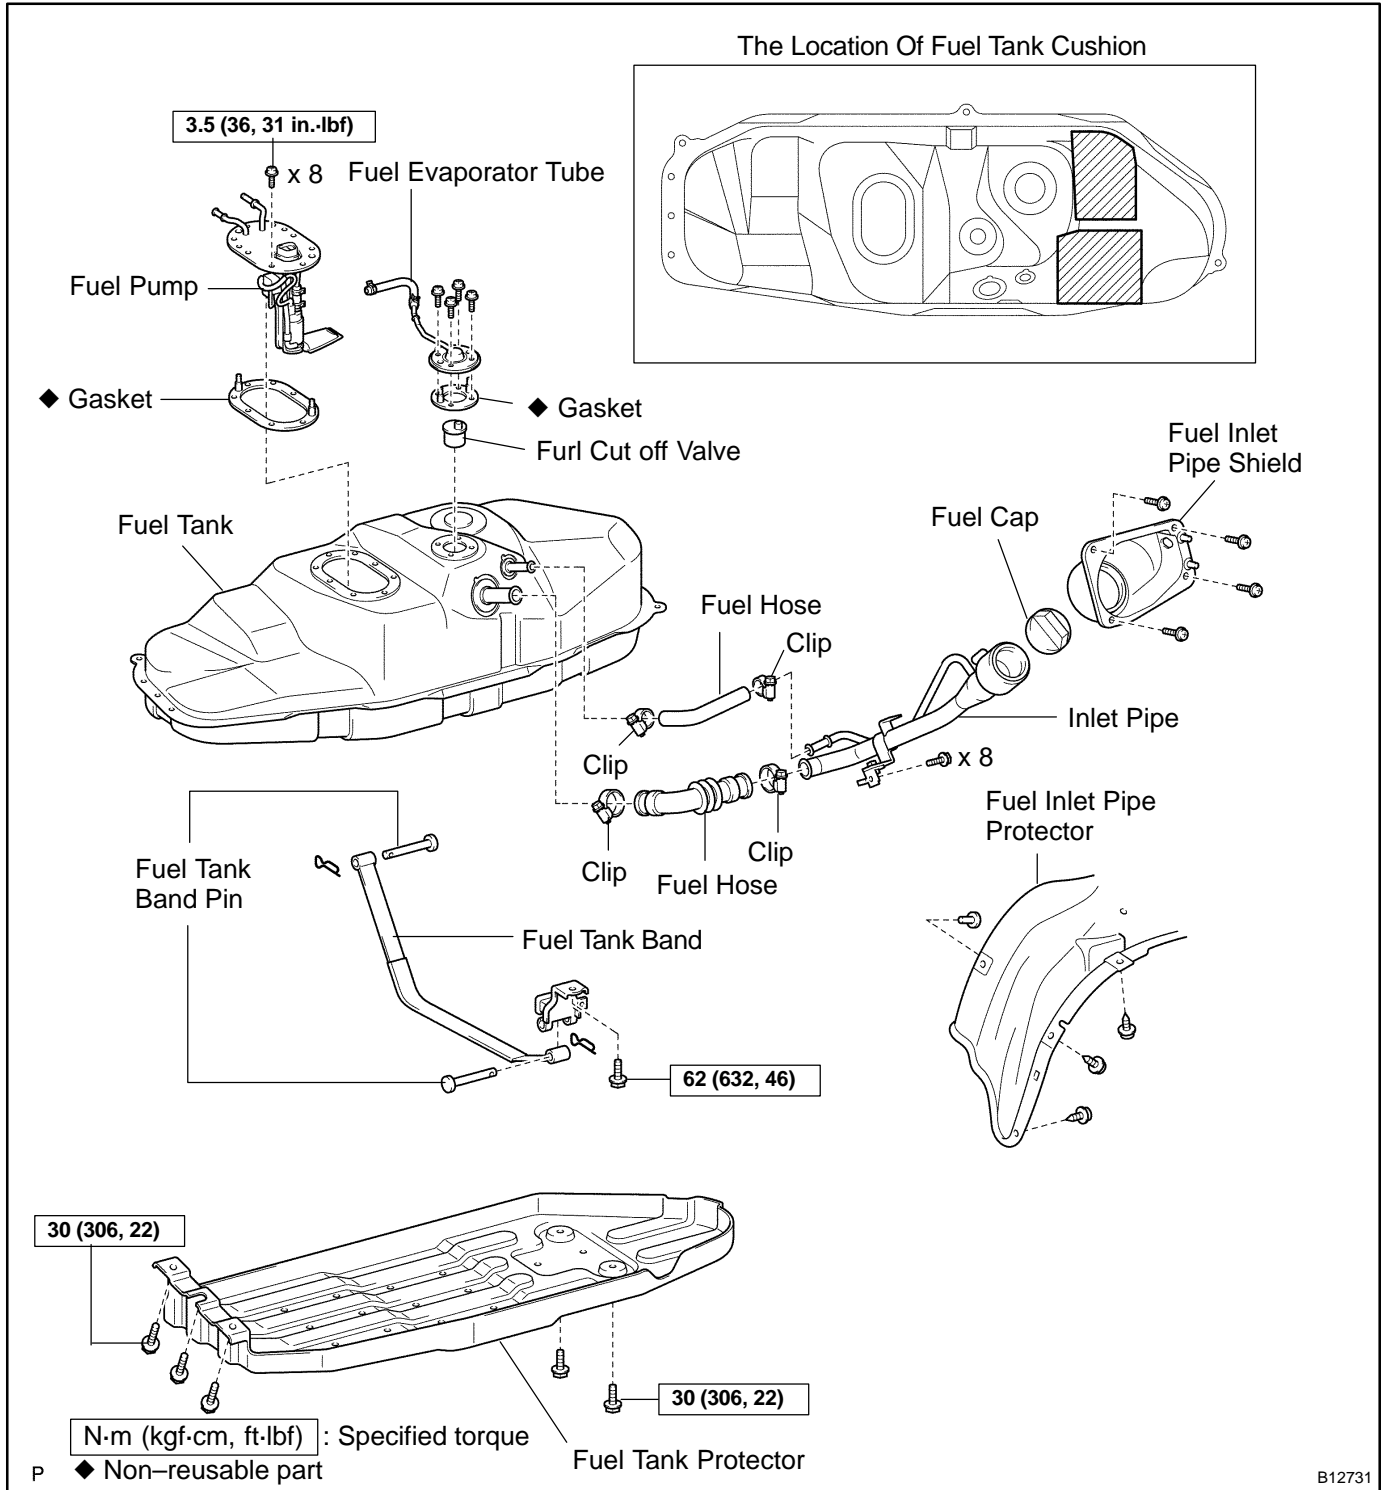

B12731