



INSPECTION

INSPECT IAC VALVE OPERATION

- (a) Check that the IAC valve is halfly opened.
- (b) Connect the IAC valve connector to the IAC valve.
- (c) Disconnect the ECT sensor connector from the ECT sensor.
- (d) Turn the ignition switch ON.
- (e) Check that the IAC valve moves.

HINT:

Repeat connecting and disconnecting of IAC valve connector several times and check the operation of the valve.

If operation is not as specified, replace the IAC valve.

- (f) Turn the ignition switch OFF.
- (g) Reconnect the ECT sensor connector to the ECT sensor.
- (h) Disconnect the IAC valve connector from the IAC valve.