


REMOVAL

1. REMOVE THROTTLE BODY (See page SF-30)

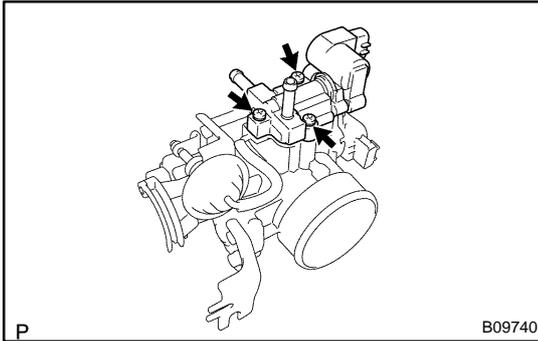

2. REMOVE IAC VALVE

Remove the 3 screws, IAC valve and gasket.

HINT:

At the time of installation, please refer to the following items.
Place a new gasket on the throttle body.