



INSTALLATION

1. **INSTALL MAF METER TO AIR CLEANER CAP**
 - (a) Place a new gasket on the air cleaner cap.
 - (b) Install the MAF meter with the 4 nuts.
Torque: 8.5 N·m (85 kgf·cm, 74 in.-lbf)
2. **INSTALL MAF METER WITH AIR CLEANER CAP**