


REMOVAL

1. **REMOVE AIR CLEANER CAP WITH MAF METER**
 - (a) Disconnect the MAF meter connector and wire clamp.
 - (b) Loosen the air cleaner hose clamp.
 - (c) Disconnect the air hose from air cleaner cap.
 - (d) Loosen the 4 clips, and remove the air cleaner cap together with the MAF meter.

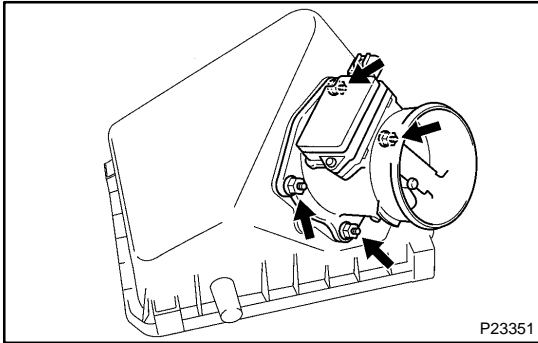

2. **REMOVE MAF METER FROM AIR CLEANER CAP**

Remove the 4 nuts, MAF meter and gasket.