



## INSTALLATION

### 1. INSTALL FUEL PRESSURE REGULATOR

- (a) Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.
- (b) Attach the pressure regulator to the LH delivery pipe.

- (c) Check that the pressure regulator rotates smoothly.

#### NOTICE:

If it does not rotate smoothly, the O-ring may be pinched, so remove the pressure regulator and repeat steps (a) to (c) above.

- (d) Install the pressure regulator with the 2 bolts.

**Torque: 8 N·m (80 kgf·cm, 71 in.-lbf)**

- (e) Install the engine wire with the bolt.

### 2. CONNECT FUEL RETURN HOSE TO FUEL PRESSURE REGULATOR

#### NOTICE:

Be sure to insert the hose up to the stopper and clip it.

3. INSTALL INTAKE AIR CONNECTOR ASSEMBLY  
(See page [EM-52](#))
4. INSTALL AIR CLEANER HOSE
5. CHECK FOR FUEL LEAKS (See page [SF-1](#))