


## REMOVAL

### 1. REMOVE THROTTLE BODY (See page [SF-36](#))

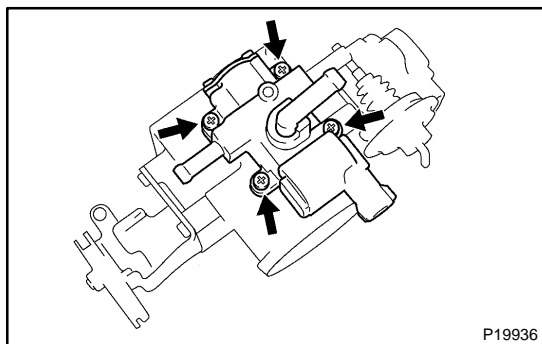

### 2. REMOVE IAC VALVE

Remove the 4 screws, IAC valve and gasket.

HINT:

At the time of installation, please refer to the following items.

Place a new gasket on the throttle body.