

REMOVAL

1. DRAIN ENGINE COOLANT

2. DISCONNECT CABLES:




- (a) w/ Cruise Control:
Disconnect the cruise control actuator cable.
- (b) Disconnect the accelerator cable.
- (c) A/T:
Disconnect the throttle cable.

3. REMOVE AIR CLEANER HOSE

4. REMOVE THROTTLE BODY

- (a) Disconnect the throttle position sensor connector.
 - (b) Disconnect the IAC valve connector.
 - (c) Disconnect the vacuum hose for the throttle opener.
 - (d) Disconnect the water bypass hose (from water bypass pipe).
 - (e) Disconnect the water hose (from intake manifold).
 - (f) Disconnect the air assist hose.
- (g) Remove the 2 bolts, 2 nuts, throttle body and gasket.

Torque: 18 N·m (180 kgf·cm, 13 ft·lbf)

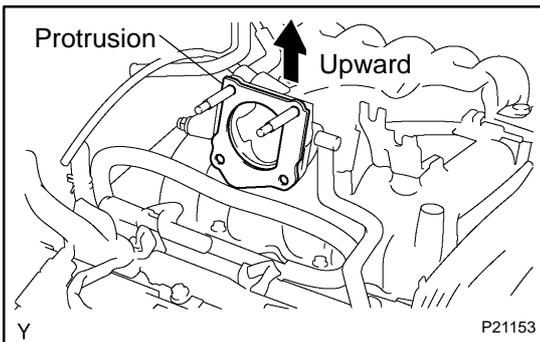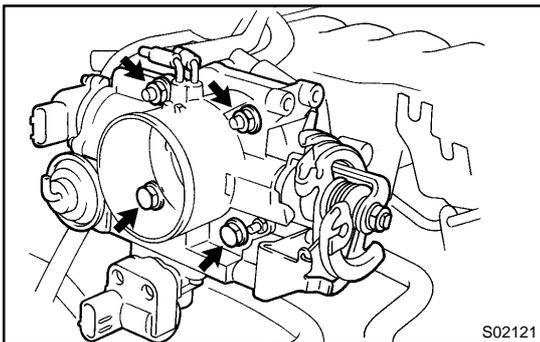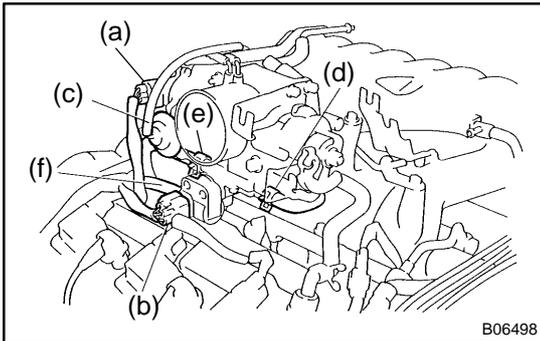

HINT:

At the time of installation, please refer to the following items. Place a new gasket on the air intake chamber facing the protrusion upward.