



AIR CONTROL VALVE INSPECTION

SR047-03

1. **TURN AIR CONDITIONING SWITCH OFF**
2. **CHECK IDLE-UP**
 - (a) Start engine and run it at idle.
 - (b) Fully turn the steering wheel.
 - (c) Check that the engine speeds decreases when the vacuum hose of the air control valve is pinched.
 - (d) Check that the engine speeds increases when the hose is released.