


LIGHT AUTO TURN OFF

- * 1 : W/ DAYTIME RUNNING LIGHT
- * 2 : W/O DAYTIME RUNNING LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 54)

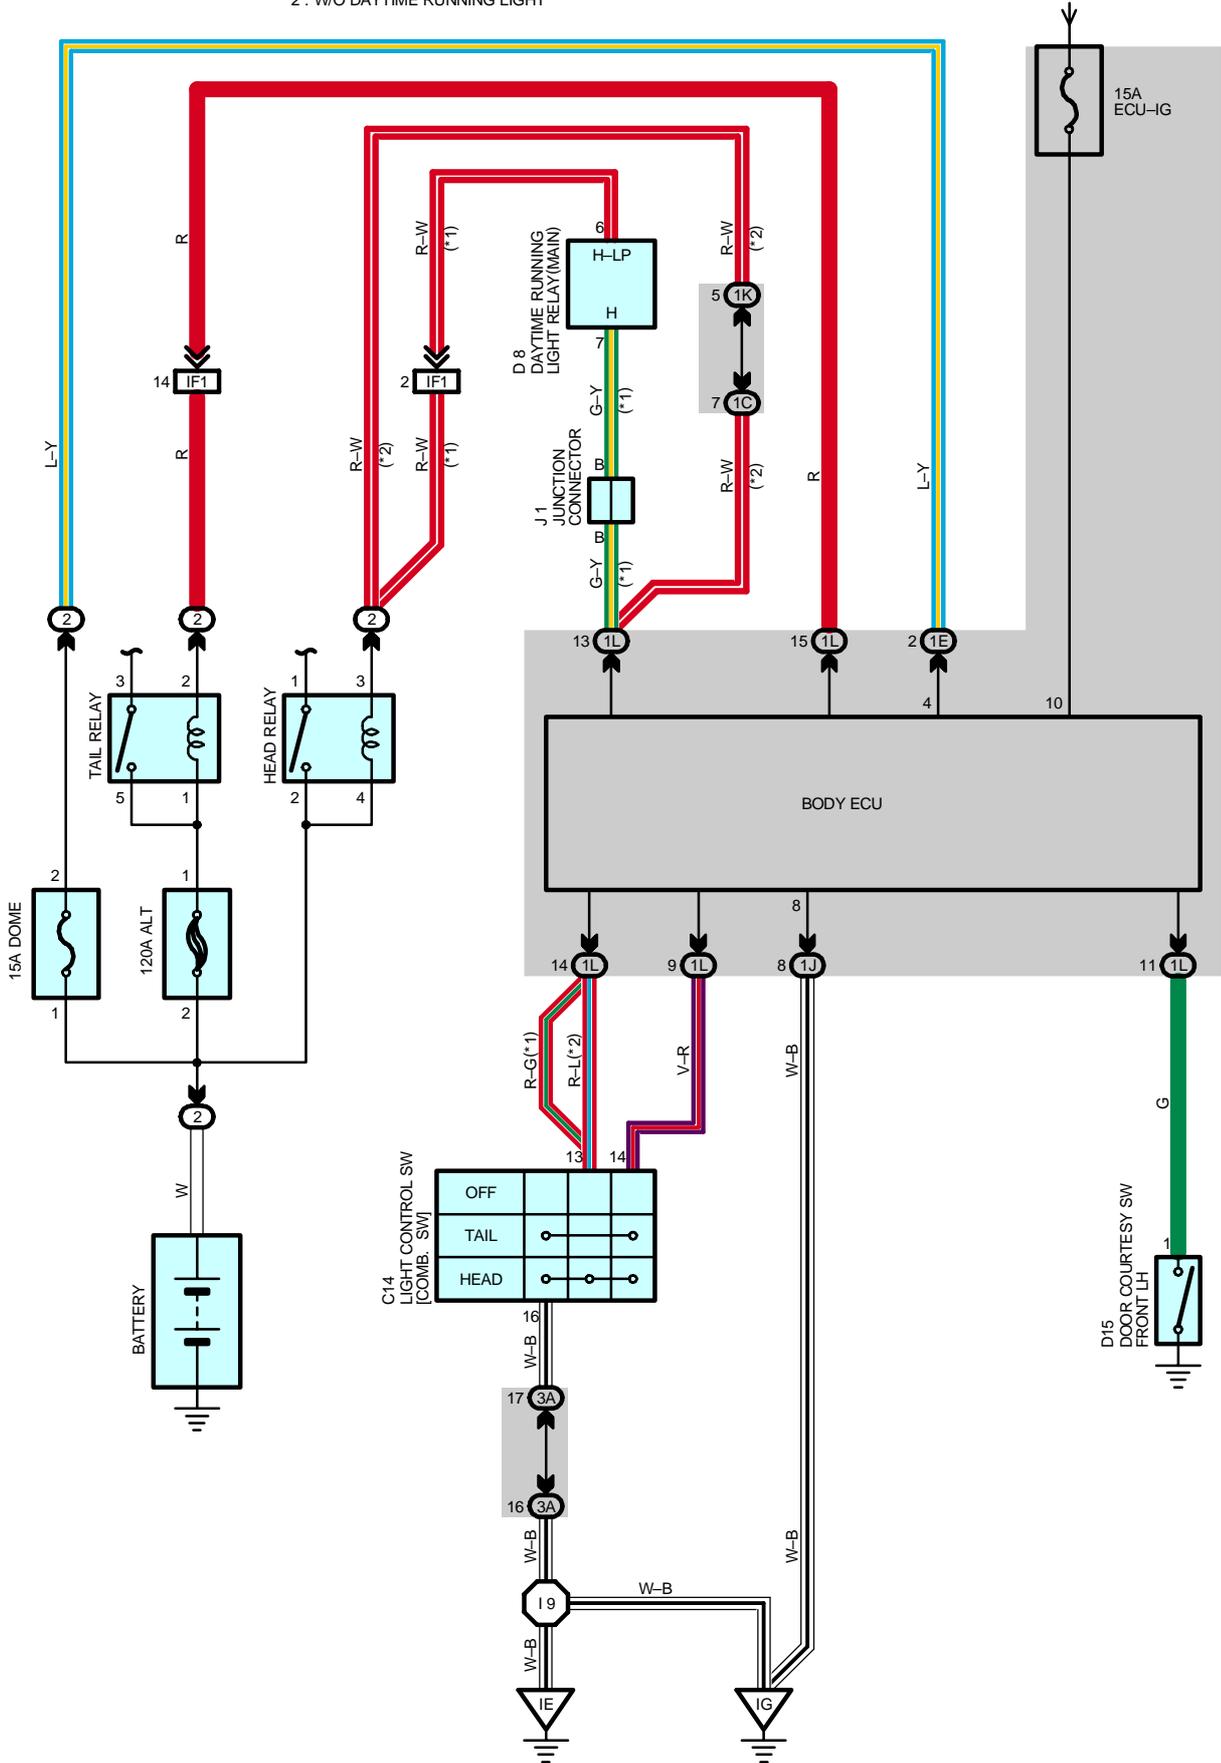

SYSTEM OUTLINE

The light auto turn off system automatically turns the taillight or headlight off according to the door open or close on the driver's side, and prevent failing to turn off the lights.

If the ignition switch is turned to OFF from ON with the headlight or taillight is on, the signal is input in the body ECU. If the driver's seat door is opened at that time, the signal from the door courtesy SW front LH is sent to the body ECU. The signal turns the headlight or taillight off by the body ECU.

SERVICE HINTS

BODY ECU

10-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

4-GROUND : Always approx. **12** volts

8-GROUND : Always continuity

: PARTS LOCATION

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| C14 | 34 | D15 | 34 | | |
| D8 | 34 | J1 | 35 | | |

: RELAY BLOCKS

| Code | See Page | Relay Blocks (Relay Block Location) |
|------|----------|-------------------------------------|
| 2 | 21 | R/B No.2 (Engine Compartment Left) |

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|---|
| 1C | 23 | Cowl Wire and J/B No.1 (Lower Finish Panel) |
| 1E | 23 | Engine Room Main Wire and J/B No.1 (Lower Finish Panel) |
| 1J | 23 | Cowl Wire and J/B No.1 (Lower Finish Panel) |
| 1K | 23 | Engine Room Main Wire and J/B No.1 (Lower Finish Panel) |
| 1L | 22 | Cowl Wire and J/B No.1 (Lower Finish Panel) |
| 3A | 24 | Cowl Wire and J/B No.3 (Behind the Instrument Panel Left) |

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|----------|--|
| IF1 | 44 | Engine Room Main Wire and Cowl Wire (Left Kick Panel) |

: GROUND POINTS

| Code | See Page | Ground Points Location |
|------|----------|--|
| IE | 44 | Around the Right Edge of the Reinforcement |
| IG | 44 | Around the Left Edge of the Reinforcement |

: SPLICE POINTS

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I9 | 44 | Cowl Wire | | | |