



# 4WD (w/o 2-4 SELECT SW)

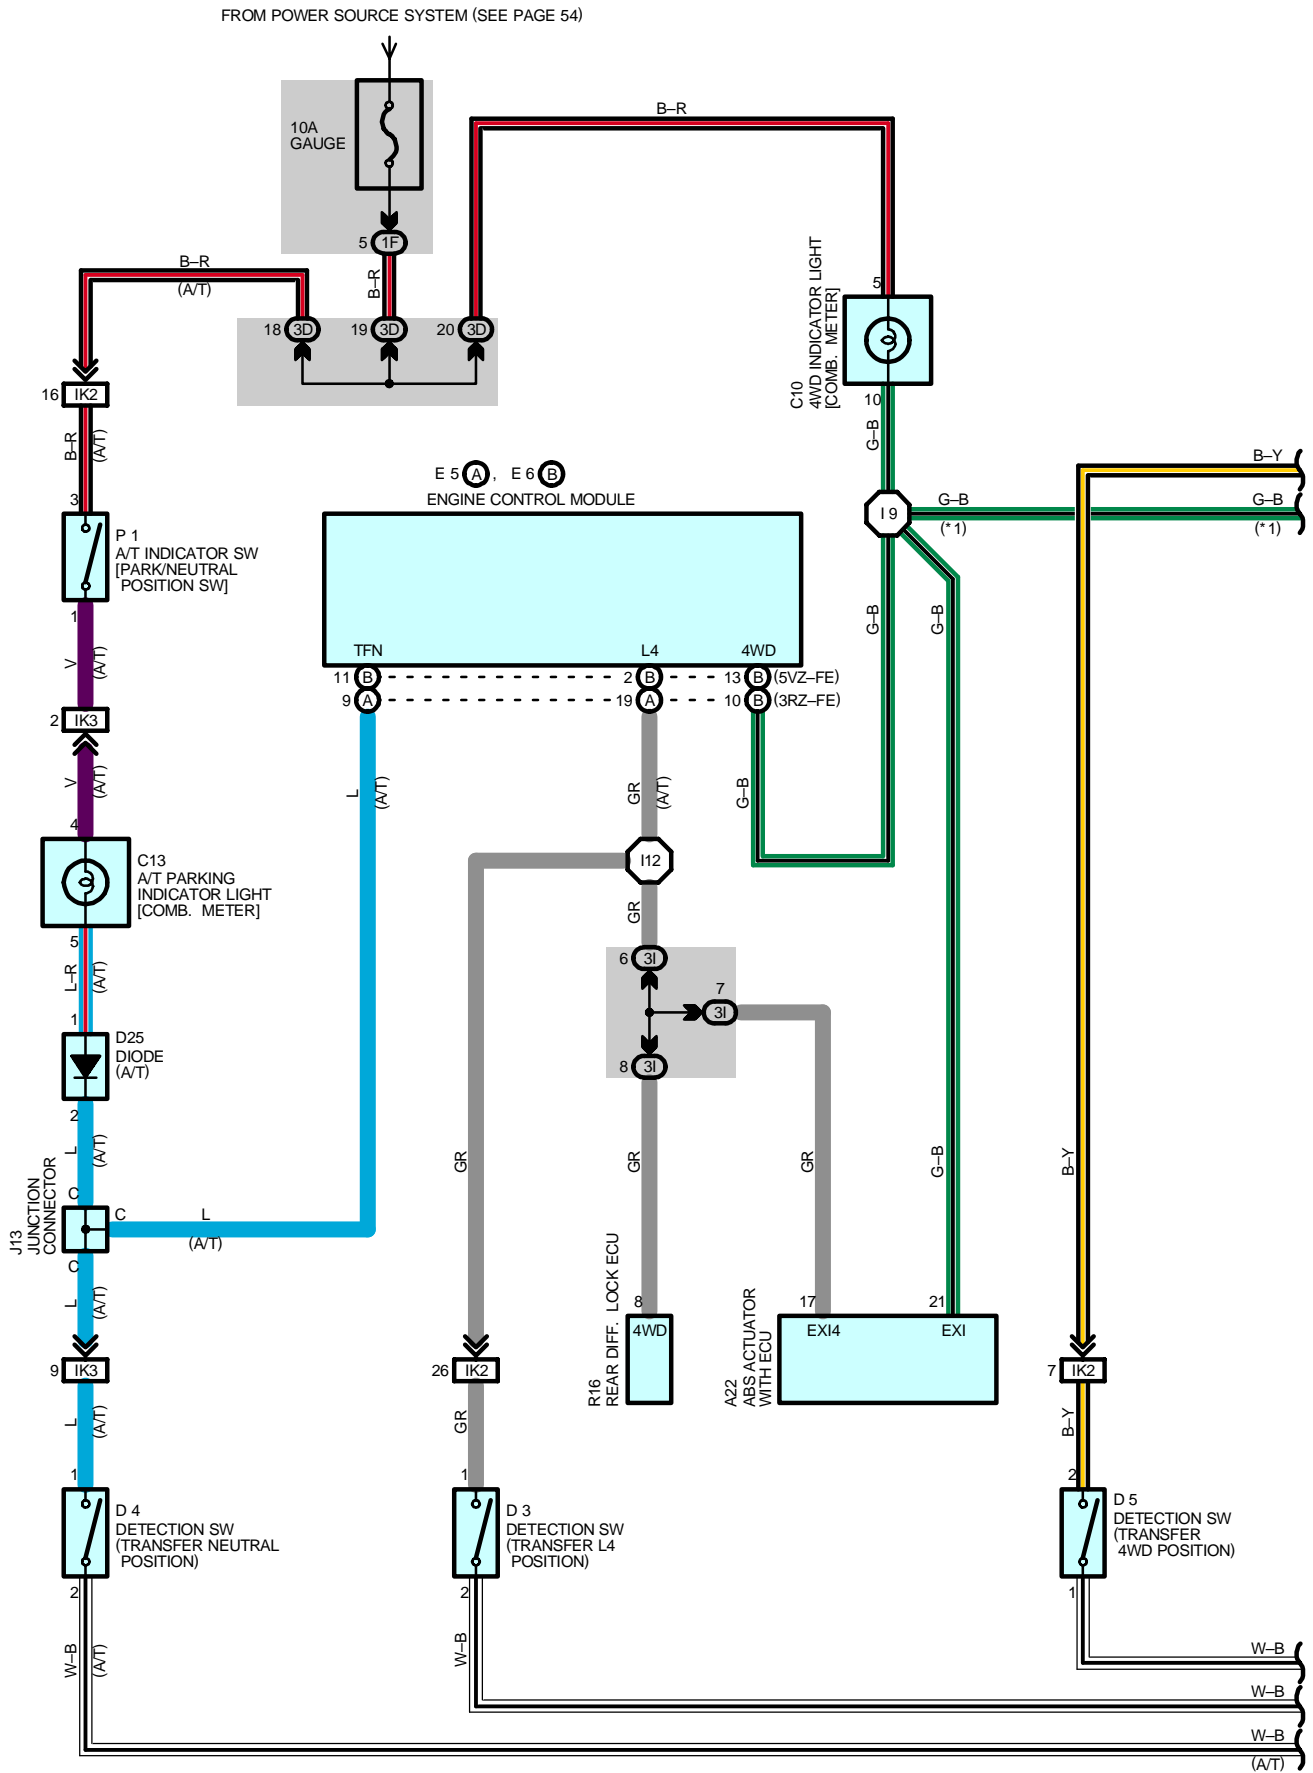

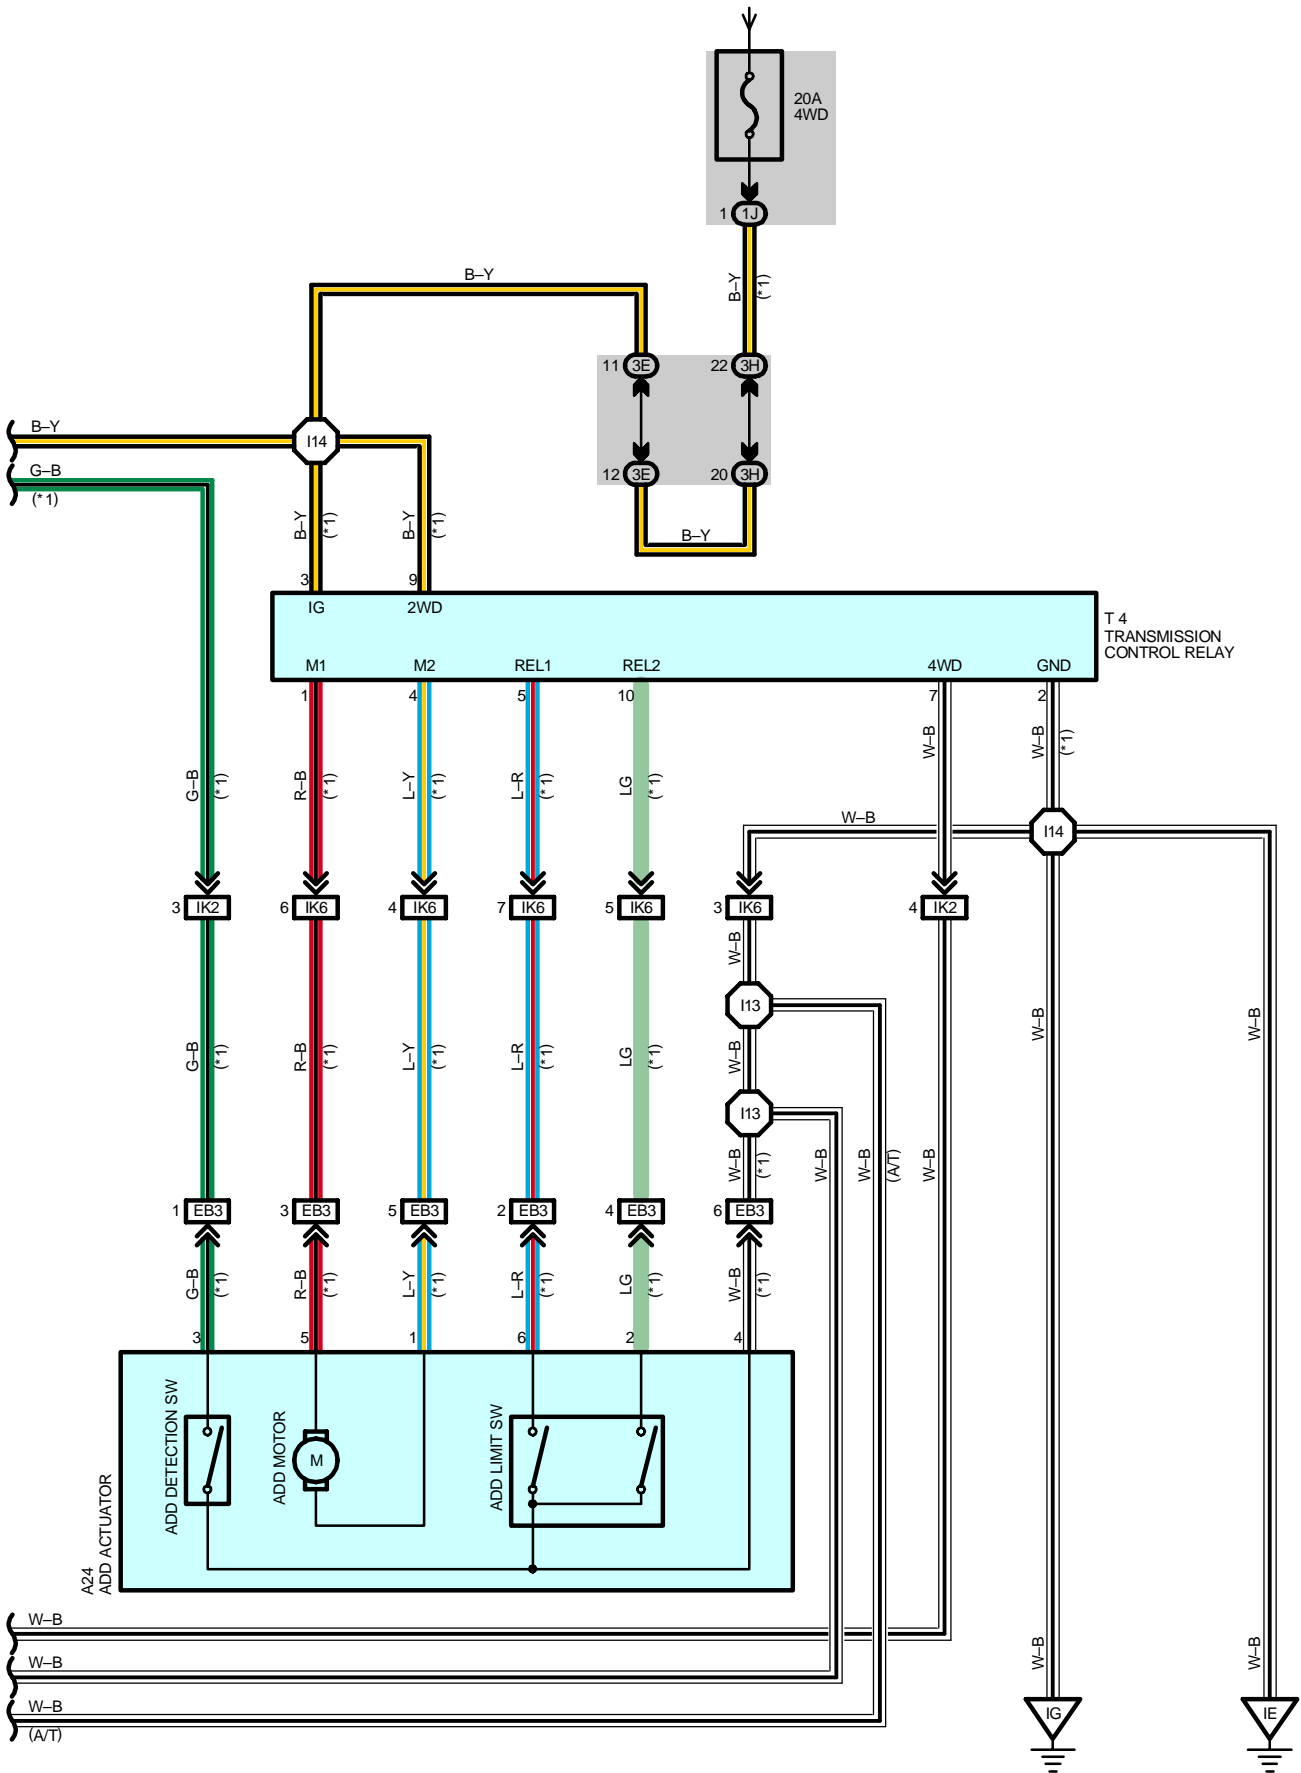

# 4WD (w/o 2-4 SELECT SW)

## SERVICE HINTS

### P1 A/T INDICATOR SW [PARK/NEUTRAL POSITION SW]

3-1 : Closed with A/T shift position at **P** position

### D4 DETECTION SW (TRANSFER NEUTRAL POSITION)

1-2 : Closed with transfer position at **N** position

## ○ : PARTS LOCATION

| Code | See Page    | Code        | See Page    | Code | See Page    |
|------|-------------|-------------|-------------|------|-------------|
| A22  | 30 (5VZ-FE) | D3          | 32 (3RZ-FE) | E6   | B 35        |
|      | 32 (3RZ-FE) | D4          | 30 (5VZ-FE) | J13  | 35          |
| A24  | 30 (5VZ-FE) |             | 32 (3RZ-FE) | P1   | 31 (5VZ-FE) |
|      | 32 (3RZ-FE) | 30 (5VZ-FE) | 33 (3RZ-FE) |      |             |
| C10  | 34          | D5          | 32 (3RZ-FE) | R16  | 35          |
| C13  | 34          |             | D25         | 34   | T4          |
| D3   | 30 (5VZ-FE) | E5          | A           | 35   |             |

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location)        |
|------|----------|---|
| 1F   | 23       | Cowl Wire and J/B No.1 (Lower Finish Panel)                 |
| 1J   |          |   |
| 3D   | 24       | Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)   |
| 3E   |          |   |
| 3H   | 26       | Cowl Wire and J/B No.3 (Behind the Instrument Panel Center) |
| 3I   |          |   |

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page    | Joining Wire Harness and Wire Harness (Connector Location)        |
|------|-------------|---|
| EB3  | 40 (5VZ-FE) | Engine Wire and Differential Wire (Front Differential Upper Side) |
|      | 42 (3RZ-FE) |   |
| IK2  | 44          | Engine Wire and Cowl Wire (Above the Glove Box)                   |
| IK3  |             |   |
| IK6  |             |   |

## ▽ : GROUND POINTS

| Code | See Page | Ground Points Location                     |
|------|----------|--|
| IE   | 44       | Around the Right Edge of the Reinforcement |
| IG   | 44       | Around the Left Edge of the Reinforcement  |

## ○ : SPLICE POINTS

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I9   | 44       | Cowl Wire                       | I13  | 44       | Engine Wire                     |
| I12  |          |                                 | I14  | 44       | Cowl Wire                       |

