


CIGARETTE LIGHTER AND CLOCK

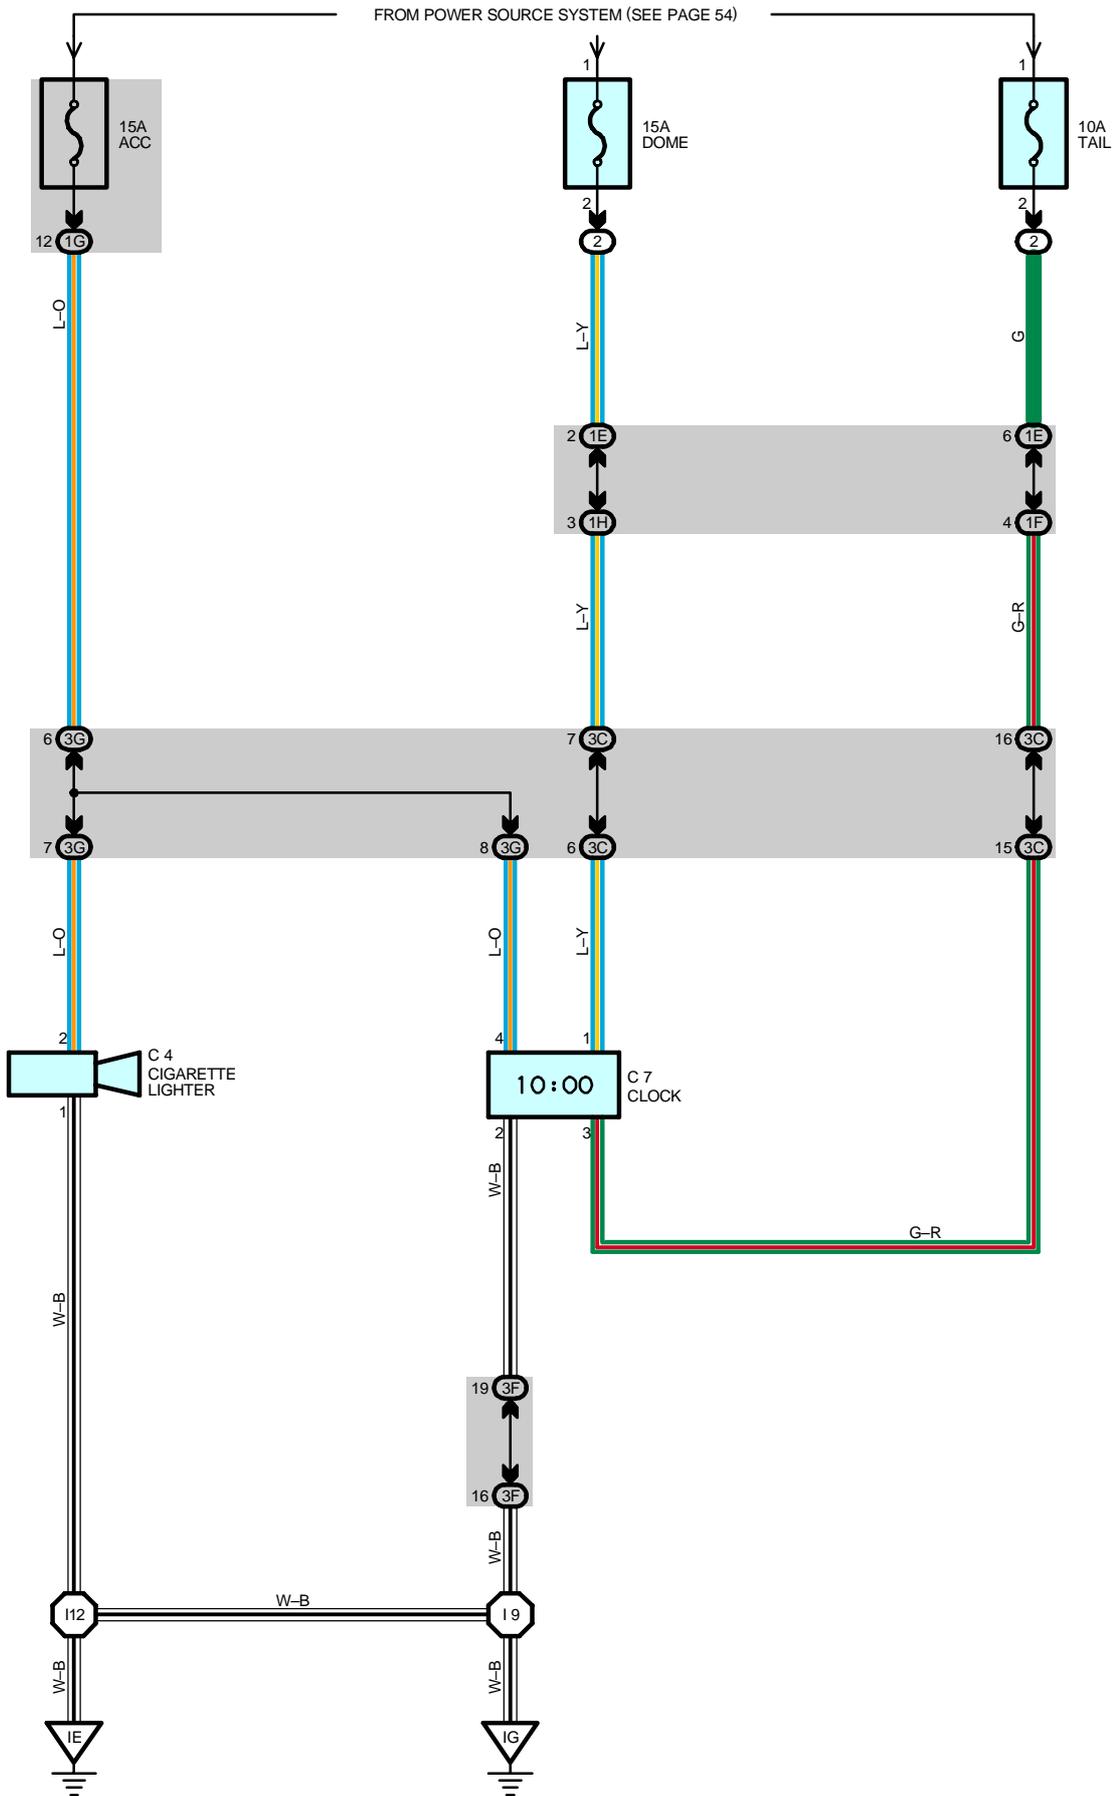

SERVICE HINTS

C4 CIGARETTE LIGHTER

- 2-GROUND : Approx. **12** volts with ignition SW at **ON** and **ACC** position
- 1-GROUND : Always continuity

C7 CLOCK

- 1-GROUND : Always approx. **12** volts (Power for clock)
- 4-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position (Power for indication)
- 3-GROUND : Approx. **12** volts with light control SW at **TAIL** or **HEAD** position (Signal of indication)
- 2-GROUND : Always continuity

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
C4	34	C7	34		

 : **RELAY BLOCKS**

Code	See Page	Relay Blocks (Relay Block Location)
2	21	R/B No.2 (Engine Compartment Left)

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	23	Engine Room Main Wire and J/B No.1 (Lower Finish Panel)
1F	23	Cowl Wire and J/B No.1 (Lower Finish Panel)
1G		
1H		
3C	24	Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)
3F		
3G	26	Cowl Wire and J/B No.3 (Behind the Instrument Panel Center)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
IE	44	Around the Right Edge of the Reinforcement
IG	44	Around the Left Edge of the Reinforcement

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I9	44	Cowl Wire	I12	44	Cowl Wire