


POWER SEAT

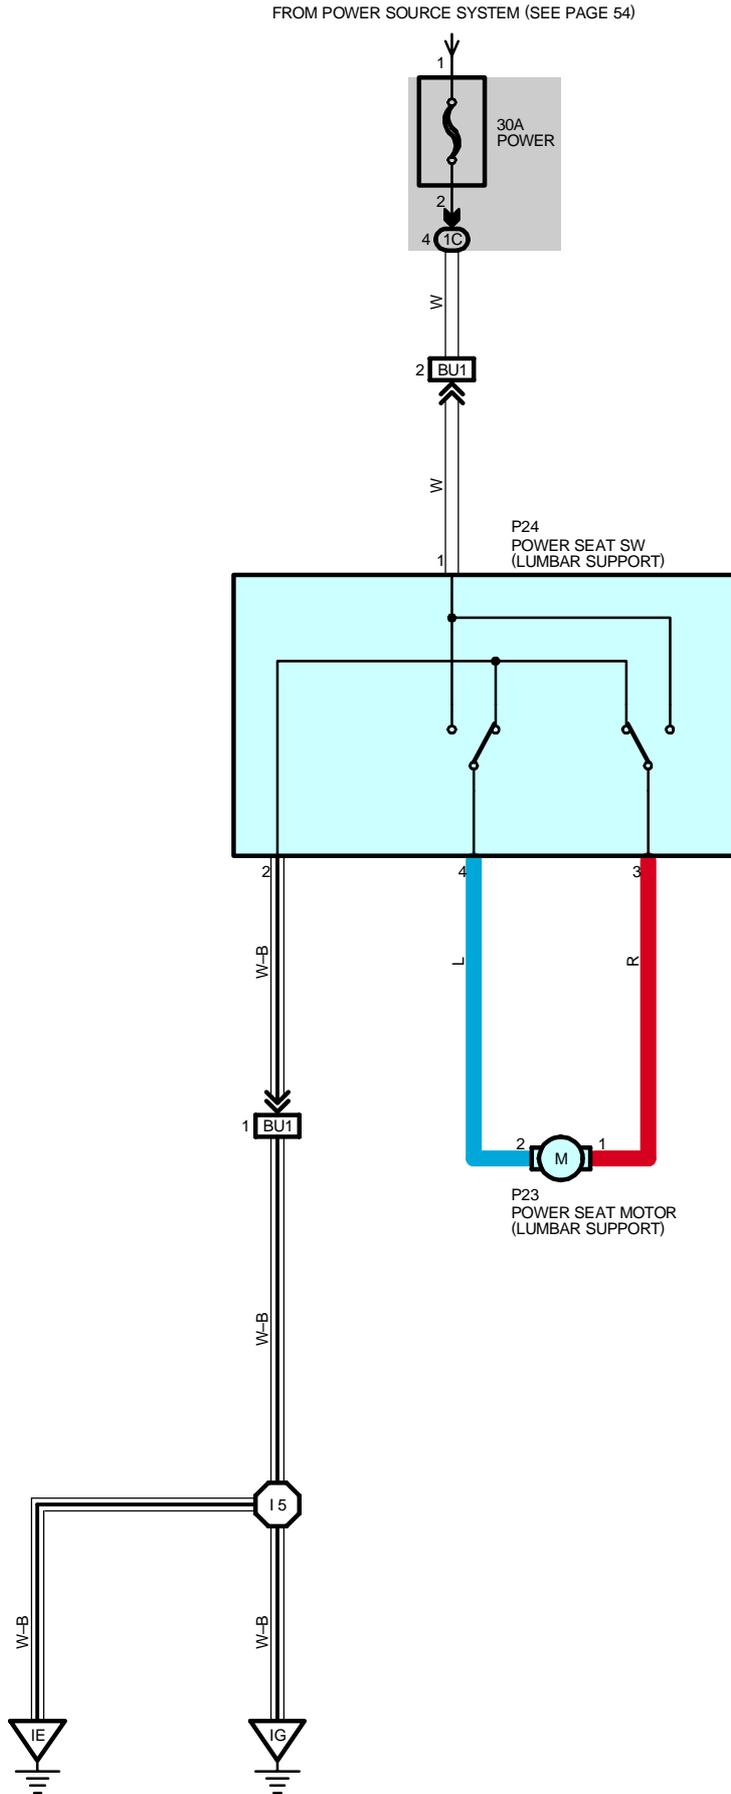

SERVICE HINTS**P24 POWER SEAT SW (LUMBAR SUPPORT)**

1-GROUND : Always approx. 12 volts

2-GROUND : Always continuity

 : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
P23	38	P24	38		

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Cowl Wire and J/B No.1 (Lower Finish Panel)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BU1	50	Cowl Wire and Seat No.1 Wire (Under the Driver's Seat)

 : GROUND POINTS

Code	See Page	Ground Points Location
IE	44	Around the Right Edge of the Reinforcement
IG	44	Around the Left Edge of the Reinforcement

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	44	Cowl Wire			