


EXHAUST GAS RECIRCULATION (EGR) GAS TEMPERATURE SENSOR (3RZ-FE)

INSPECTION

SF11H-01

1. REMOVE EGR VALVE (See page [EC-13](#))
2. REMOVE EGR GAS TEMPERATURE SENSOR

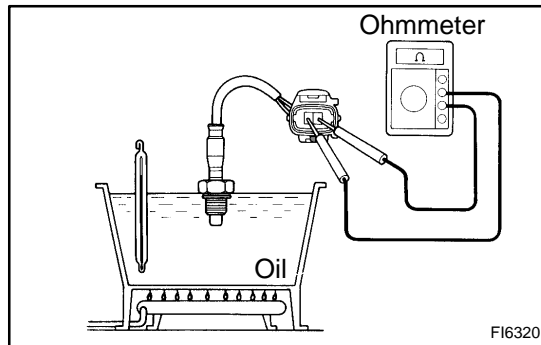

3. INSPECT EGR GAS TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

at 50°C (122°F)	64 – 97 kΩ
at 100°C (212°F)	11 – 16 kΩ
at 150°C (302°F)	2 – 4 kΩ

If the resistance is not as specified, replace the sensor.

4. REINSTALL EGR GAS TEMPERATURE SENSOR
5. REINSTALL EGR VALVE