

MANIFOLD GAUGE SET

SET ON

1. CONNECT CHARGE HOSE TO MANIFOLD GAUGE SET

Tighten the nuts by hand.


CAUTION:

Do not connect the wrong hoses.

2. CONNECT QUICK DISCONNECT ADAPTERS TO CHARGING HOSES

Tighten the nuts by hand.

- 3. CLOSE BOTH HAND VALVE OF MANIFOLD GAUGE SET
- 4. REMOVE CAPS FROM SERVICE VALVE ON REFRIG-ERANT LINE

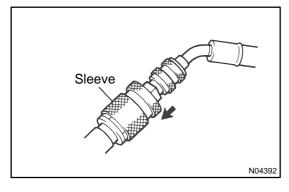

5. CONNECT QUICK DISCONNECT ADAPTER TO SER-VICE VALVES

HINT:

Push the quick disconnect adapter onto the service valve, then slide, then slide the sleeve of the quick disconnect adapter downward to lock it.

2003 TOYOTA TACOMA (RM1002U)

Author: Date: 2504