


REASSEMBLY

1. INSTALL COIL SPRING TO SHOCK ABSORBER

- (a) Using SST, compress the coil spring.
SST 09727-30021

NOTICE:

- To avoid damage to SST, set SST arms to allow clearance to hold a 8-roll coil between them.
- Do not compress the coil spring more than necessary.
- Do not use an impact wrench. It will damage the SST.

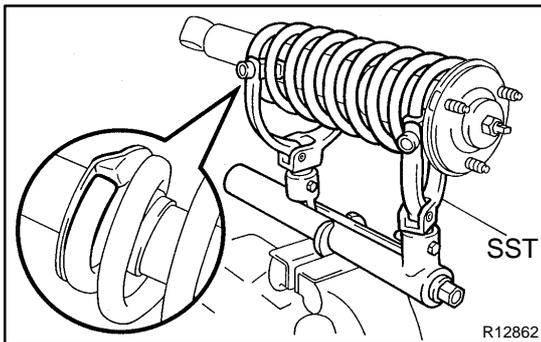


- (b) Install the coil spring to the shock absorber.

HINT:

Fit the lower end of the coil spring into the gap of the spring seat of the shock absorber.

2. INSTALL SUSPENSION SUPPORT

- (a) Install the 2 cushions, 3 retainers and suspension support to the rod.
(b) Temporarily tighten a new suspension support center nut.

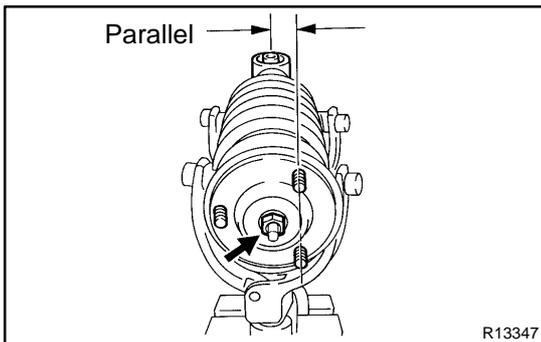

- (c) Position the suspension support so that a line drawn between the 2 bolts would be parallel to the direction of the lower bushing.

- (d) Remove the SST.
SST 09727-30021

HINT:

After removing the SST, again check the direction of the suspension support.

- (e) Torque the suspension center nut.

Torque: 29 N·m (300 kgf·cm, 22 ft·lbf)