

DTC	P1133	A/F Sensor Circuit Response Malfunction (Bank 1 Sensor 1)
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to DTC P0125 on page [DI-42](#) .

DTC No.	DTC Detection Condition	Trouble Area
P1133	After engine is warmed up and during vehicle driving at engine speed 1,400 rpm or more and vehicle speed 60 km/h (38 mph) or more, if response characteristic of A/F sensor becomes deteriorated (2 trip detection logic)	<ul style="list-style-type: none"> • Oper or short in A/F sensor circuit • A/F sensors • Air induction system • Fuel pressure • Injector • ECM

WIRING DIAGRAM



Refer to DTC P0125 on page [DI-42](#) .

INSPECTION PROCEDURE

HINT:

Read freeze frame data using the TOYOTA hand-held tester or OBD II scan tool, as freeze frame records the engine conditions when a malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

1	Are there any other codes (besides DTC P1133) being output?
----------	--

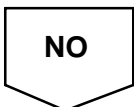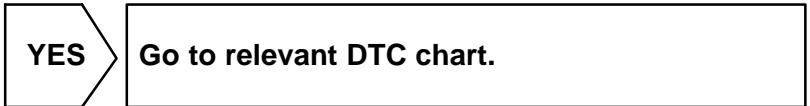

2	Connect OBDII scan tool or TOYOTA hand-held tester, and read value for voltage output of A/F sensor.
----------	---

PREPARATION:

- (a) Connect the OBD II scan tool or TOYOTA hand-held tester to the DLC3.
- (b) Warm up the A/F sensor with the engine at speed 2,500 rpm for approximately 90 seconds.

CHECK:

Read the voltage of the A/F sensor on the screen of the OBD II scan tool or TOYOTA hand-held tester when you perform all the following conditions.

HINT:

The voltage of the AFL+ terminal of the ECM is fixed at 3.3 V and the voltage of the AFL- terminal is fixed at 3.0 V. Therefore, it is impossible to check the A/F sensor output voltage at the terminals (AFL+/AFL-) of the ECM.

OK:

Condition	A/F Sensor Voltage Value
Engine idling	<ul style="list-style-type: none"> • Not remains at 3.30 V (0.660 V*) • Not remains at 3.8 V (0.76 V*) or more • Not remains at 2.8 V (0.56 V*) or less *: When using the OBD II scan tool (excluding TOYOTA hand-held tester)
Engine racing	
Driving at engine speed 1,500 rpm or more and vehicle speed 40 km/h (25 mph) or more, and operate throttle valve open and close.	

HINT:

- During fuel enrichment, there is a case that the output voltage of the A/F sensor is below 2.8 V (0.56 V*), it is normal.
- During fuel cut, there is a case that the output voltage of the A/F sensor is above 3.8 V (0.76 V*), it is normal.
- If the output voltage of the A/F sensor remains at 3.30 V (0.660 V*) even after performing all the above conditions, the A/F sensor circuit may be open.
- If the output voltage of the A/F sensor remains at 3.8 V (0.76 V*) or more, or 2.8 V (0.56 V*) or less even after performing all the above conditions, the A/F sensor circuit may be short.

*: When you use the OBD II scan tool (excluding TOYOTA hand-held tester).

OK

Go to step 8.

NG

3

Check for open and short in harness and connector between ECM and A/F sensor (See page [IN-28](#)).

NG

Repair or replace harness or connector.

OK

4

Check resistance of A/F sensor heater (See page [SF-46](#)).

NG

Replace A/F sensor.

OK

5

Check air induction system (See page [SF-1](#)).

NG

Repair or replace.

OK

6 Check fuel pressure (See page [SF-5](#)).

NG Check and repair fuel pump, pressure regulator, fuel pipe line and filter (See page [SF-1](#)).

OK

7 Check injector injection (See page [SF-17](#)).

NG Replace injector.

OK

Replace A/F sensor.

8 Perform confirmation driving pattern (See page [DI-108](#)).

Go

9 Is there DTC P1133 being output again?

YES Check and replace ECM (See page [IN-28](#)).

NO

10 Did vehicle run out of fuel in past?

NO Check for intermittent problems (See page [DI-3](#)).

YES

DTC P1133 is caused by shortage out of fuel.