


## CIRCUIT INSPECTION

### Power Source Circuit

### CIRCUIT DESCRIPTION

This circuit provides power to operate the body ECU.

### WIRING DIAGRAM

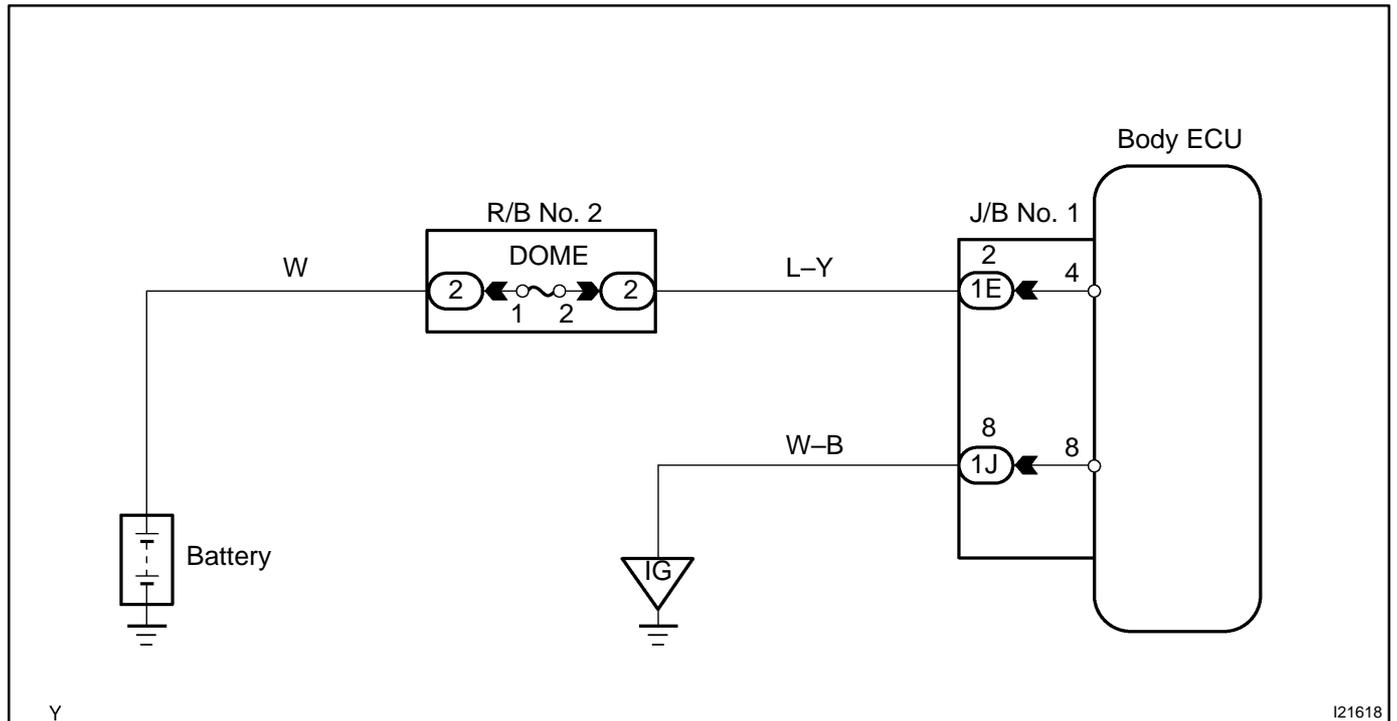

### INSPECTION PROCEDURE

- |   |                                                                            |
|---|----------------------------------------------------------------------------|
| 1 | <b>Check voltage between terminal 1E-2 and 1J-8 of body ECU connector.</b> |
|---|----------------------------------------------------------------------------|

#### **PREPARATION:**

- (a) Turn the ignition switch OFF.
- (b) Disconnect the body ECU connector.

#### **CHECK:**

Measure the voltage between terminal 1E-2 and 1J-8.


#### **OK:**

**Voltage: 9 – 14 V**

**OK**

**Proceed to next circuit inspection shown in problem symptoms table (See page [DI-773](#)).**

**NG**

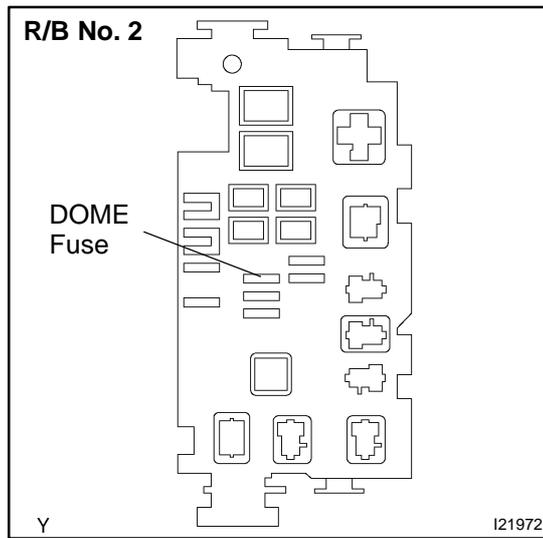**2 Check DOME fuse.**
**PREPARATION:**

Remove the DOME fuse from the R/B No. 2.

**CHECK:**

Check the continuity of the DOME fuse.

**OK:**

**Continuity**

**NG**

**Replace faulty fuse.**

**OK**

**3 Check for harness and connector between body ECU and body ground (See page [IN-28](#)).**

**NG**

**Repair or replace harness or connector.**

**OK**

**Check and repair harness or connector between body ECU and battery (See page [IN-28](#)).**