

DTC	P1135	A/F Sensor Heater Circuit Malfunction (Bank 1 Sensor 1)
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to DTC P0125 on page [DI-42](#) .

DTC No.	DTC Detection Condition	Trouble Area
P1135	When heater operates, heater current exceeds 8 A (2 trip detection logic)	<ul style="list-style-type: none"> • Open or short in heater circuit of A/F sensor • A/F sensor heater • ECM
	Heater current of 0.25 A or less when heater operates (2 trip detection logic)	

WIRING DIAGRAM


Refer to DTC P0125 on page [DI-42](#) .

INSPECTION PROCEDURE

HINT:

Read freeze frame data using the TOYOTA hand-held tester or OBD II scan tool, as freeze frame data records the engine conditions when a malfunction is detected. When troubleshooting it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

1	Check voltage between terminal HAFL of ECM connector and body ground.
----------	--

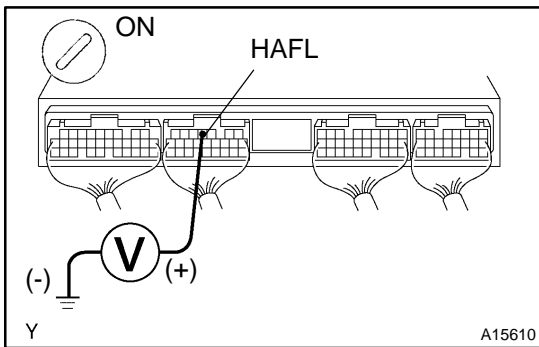

PREPARATION:

- (a) Remove the glove compartment (See page [SF-49](#)).
- (b) Turn the ignition switch ON.


CHECK:

Measure the voltage between terminals HAFL of the ECM connector and the body ground.

OK:

Voltage: 9 - 14 V

OK	Check and replace ECM (See page IN-28).
-----------	---



2	Check resistance of A/F sensor heater (See page SF-46).
----------	---

NG	Replace A/F sensor.
-----------	----------------------------



Check and repair harness or connector between EFI main relay (Marking: EFI) and A/F sensor, and A/F sensor and ECM (See page [IN-28](#)).