



**2 Nozzle Type:**

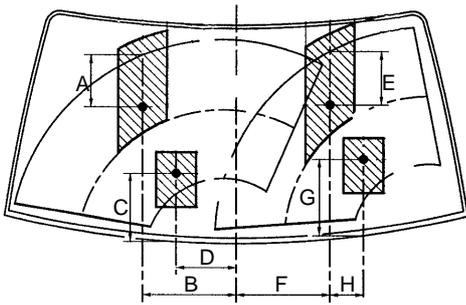

**3 Nozzle Type:**

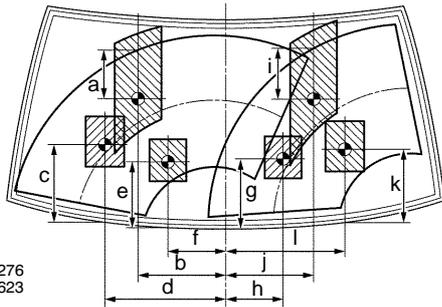

N14276  
H17623  
P

H17650

**INSPECTION**

**1. INSPECT WASHER NOZZLE**

While operating the washer, check that the point where the washer fluid hits the windshield and the surge area are within the range indicated by the hatched line.

**2 nozzle type (Reference):**


A	Approx. 156.0 mm (6.14 in.)
B	Approx. 287.7 mm (11.32 in.)
C	Approx. 238.6 mm (9.39 in.)
D	Approx. 102.5 mm (4.03 in.)
E	Approx. 162.0 mm (6.37 in.)
F	Approx. 211.4 mm (8.32 in.)
G	Approx. 156.0 mm (6.14 in.)
H	Approx. 0 - 50 mm (0 - 1.97 in.)

**3 nozzle type (Reference):**

a	Approx. 163.3 mm (6.43 in.)
b	Approx. 282.2 mm (11.11 in.)
c	Approx. 246.9 mm (9.72 in.)
d	Approx. 386.9 mm (15.23 in.)
e	Approx. 211.3 mm (8.31 in.)
f	Approx. 186.7 mm (7.35 in.)
g	Approx. 221.5 mm (8.72 in.)
h	Approx. 184.4 mm (7.26 in.)
i	Approx. 169.8 mm (6.69 in.)
j	Approx. 282.2 mm (11.11 in.)
k	Approx. 234.4 mm (9.23 in.)
l	Approx. 383.6 mm (15.10 in.)

**2. ADJUST WASHER NOZZLE**

Using a tool like the one shown in the figure, change the direction of the nozzle hole to adjust the point where washer fluid hits the windshield.

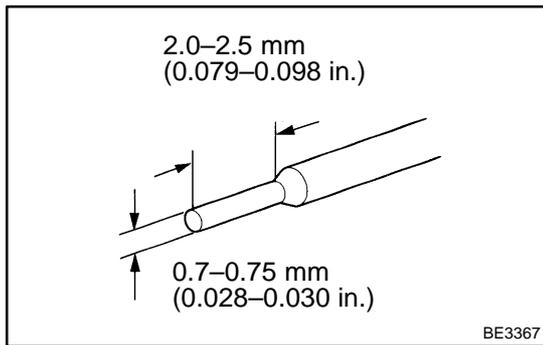

BE3367